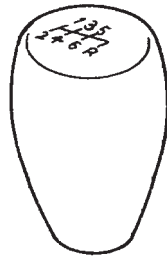


**PARTS LIST****Shift Knob**

Aluminum: P/N 08U92-S6M-200B

Titanium: P/N 08U92-S2A-100


Shift Knob

**TOOLS REQUIRED**


14 mm Combination wrench

**INSTALLATION**


1. Loosen the shift lever flange nut, then remove the knob by turning it counterclockwise.

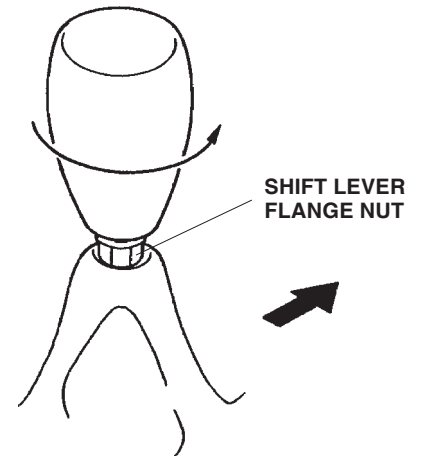

2. By hand, thread the flange nut all the way down to the last thread. Do not allow the bottom of the flange nut to extend over the last thread of the shift lever.

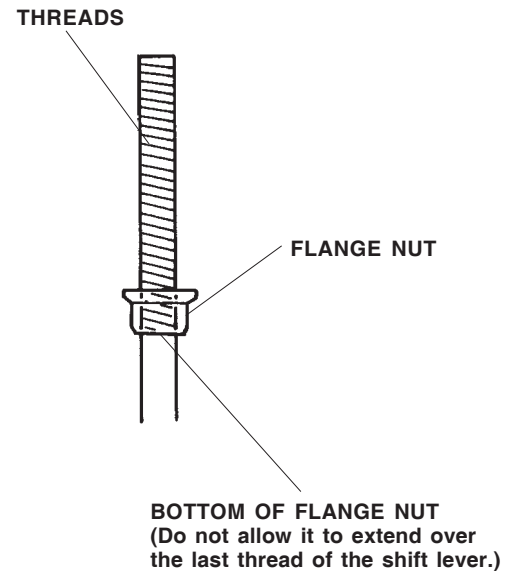

3. By hand, thread the new shift knob onto the shift lever until it bottoms against the flange nut.

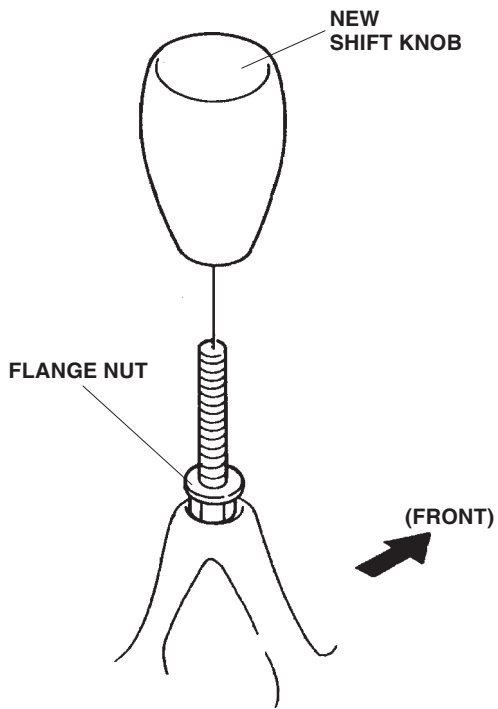

4. Turn the shift knob into the correct position for reading the gear pattern, then tighten the flange nut securely against the bottom of the shift knob using the 14 mm combination wrench.

