


PARTS LIST

Remote Engine Starter Unit Kit P/N 08E91-T2A-100

Transmitter



Control unit

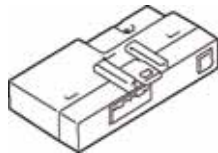

Antenna




ID label



Remote Control Engine Starter Attachment Kit P/N 08E92-T5A-100E


Engine starter harness

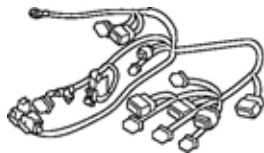

Control unit bracket



3 Relays

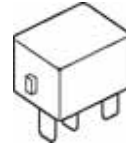

20 Wire ties



3 Long wire ties



Wire tie with clip



Ground bolt



2 Aluminum tapes




8 Urethane tapes




Caution label



Fuse label

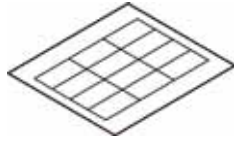

Clip

 

Accessory User's Information Manual



Quick Start Guide



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Flat-tip screwdriver

Diagonal cutters

Ratchet

10 mm Socket

10 mm Open end wrench

Isopropyl alcohol

Scissors

Shop towel

Ruler

Tape measure


HDS

Masking tape

The following tools are available through the Honda Tool and Equipment Program. On the iN, click on Service > Service Bay > Tool and Equipment Program, then enter the number under "Search." Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Remote Engine Start System II Installed in the Vehicle

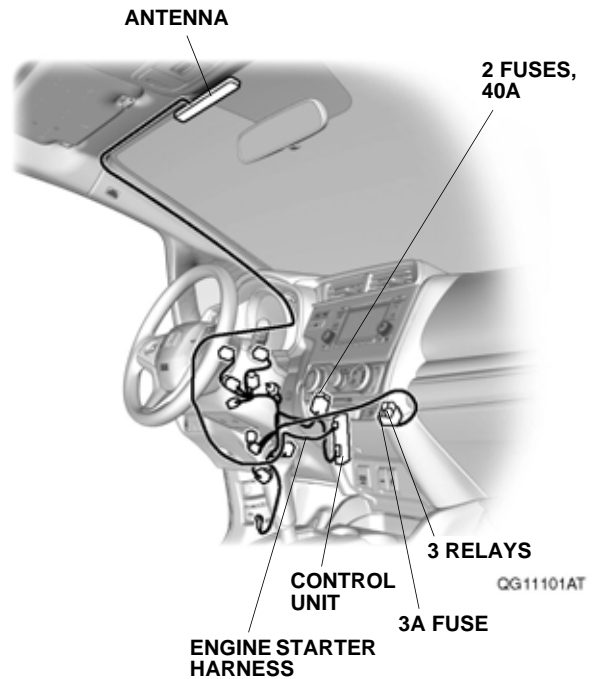


INSTALLATION

Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE: This antenna should only be installed if the ambient air temperature 15°C (60°F) or above.


1. Disconnect the negative cable from the battery.
2. Attach the ID label.
 - Using isopropyl alcohol on a shop towel, clean the transmitter where the ID label will attach.
 - Attach the ID label to the transmitter in the area as shown.

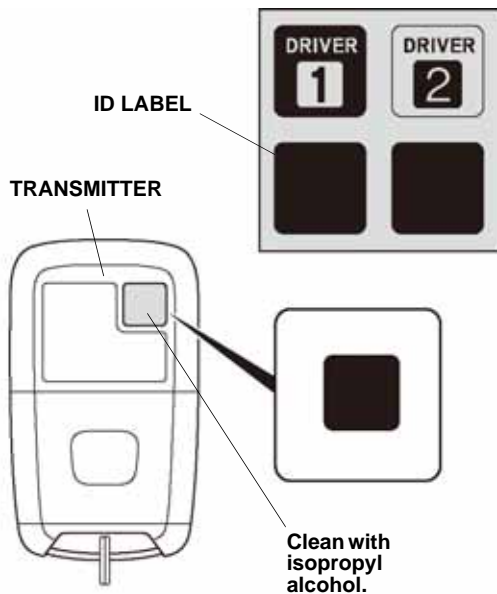


QBD0601AE

3. Remove the driver's sunvisor:
 - Pivot the driver's sunvisor downward.
 - Wrap masking tape around the tip of a flat-tip screwdriver.
 - Locate the slot in the base cover, and insert the flat-tip screwdriver into the slot. Push in and hold the retaining tab.
 - While holding the retaining tab, push up on the sunvisor and rotate it toward the door.

NOTE: If the retaining tab did not stay pushed in, return the sunvisor to its original position and repeat this step.

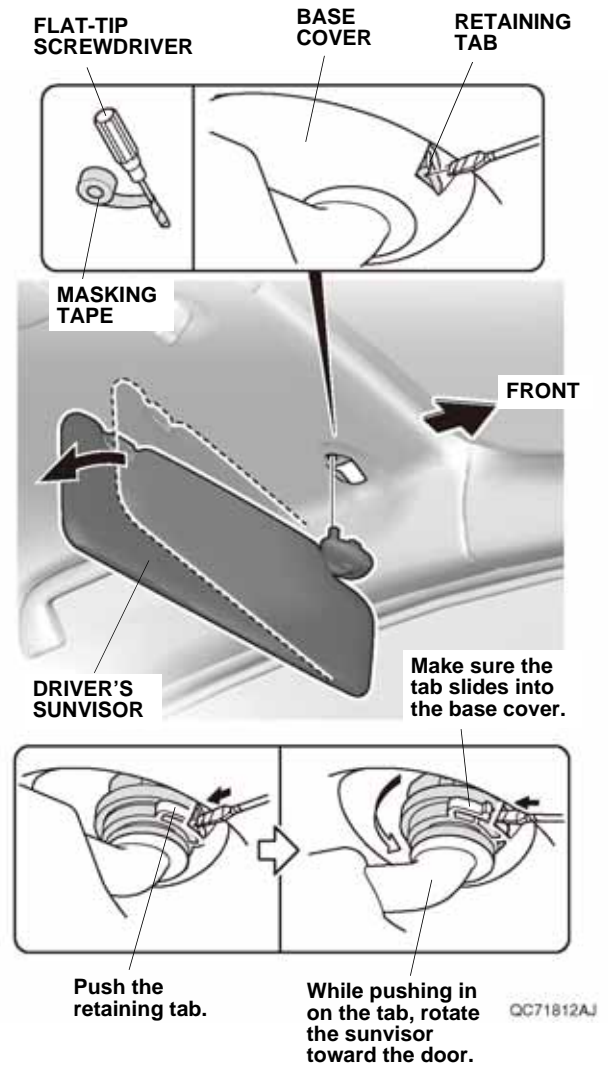


4. Remove the left sunvisor holder:
 - Wrap masking tape around the tip of a flat-tip screwdriver.
 - Release the three retaining tabs on the left sunvisor holder.

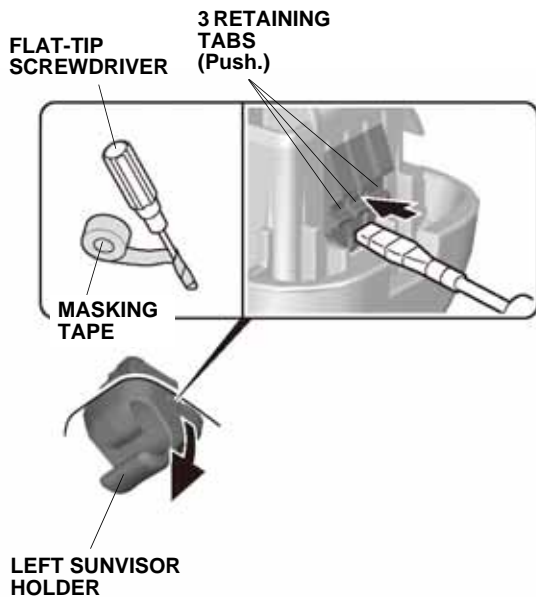


QC22003EJ

- While holding down the left sunvisor holder as shown, use a flat-tip screwdriver wrapped with masking tape to remove the left sunvisor holder.

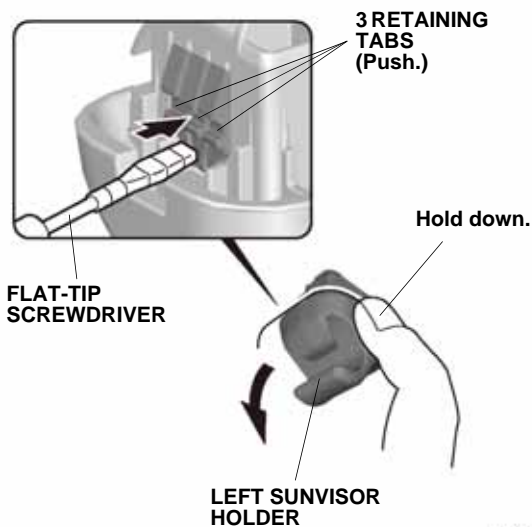


QC22004AJ

5. Remove the driver's A-pillar trim.
 - Pull away the door opening seal from the driver's A-pillar trim.
 - Pull out on the driver's A-pillar trim to release the upper clip.

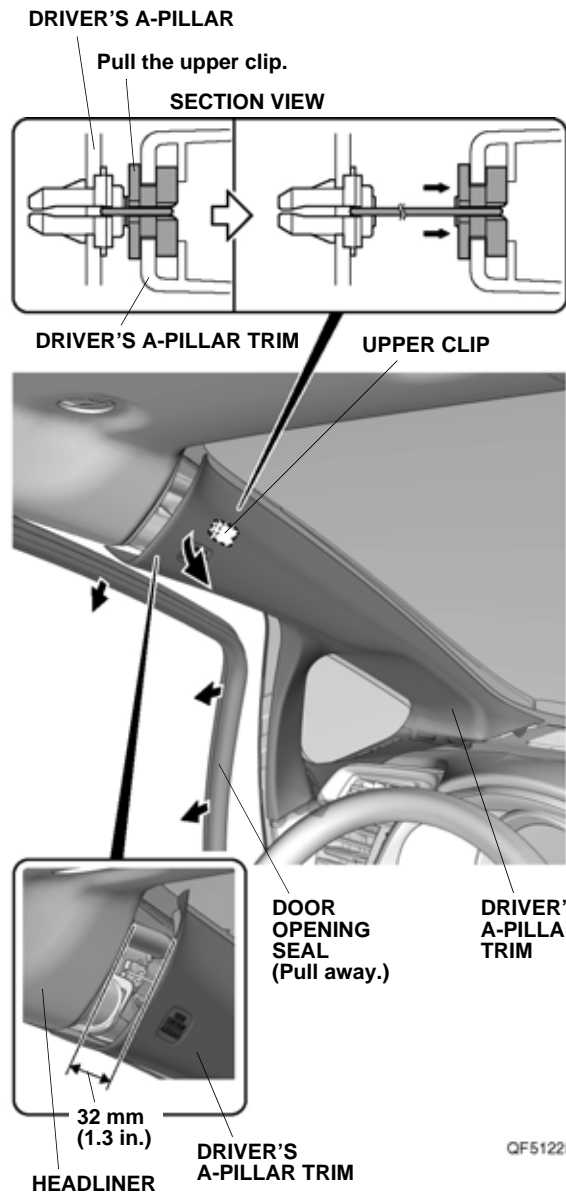


QF51225BH


- To prevent clips from falling into the body panel area, carefully insert a shop towel between the driver's A-pillar and the driver's A-pillar trim.

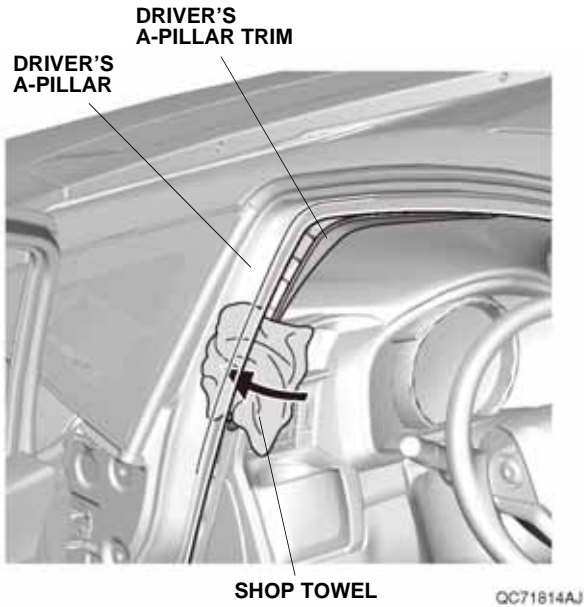


- Using scissors, cut the wires.

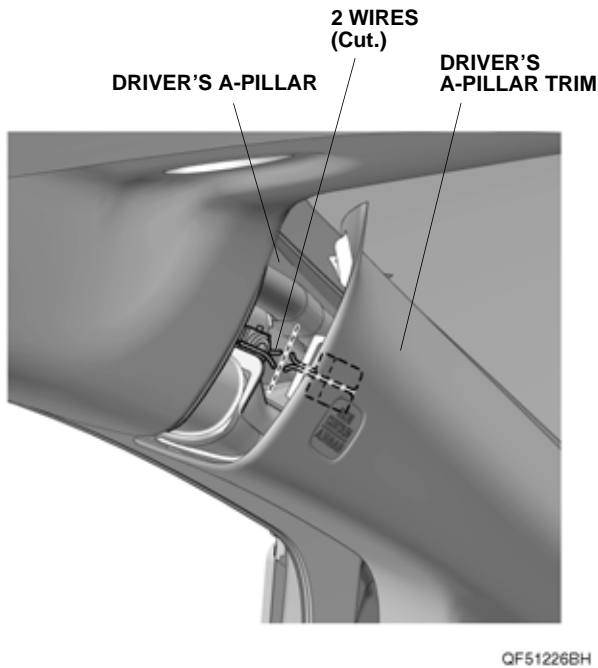


- Pull out on the driver's A-pillar trim to release two clips.
- Slide the driver's A-pillar trim upward, and remove the driver's A-pillar trim.
- Remove the shop towel and any clips.

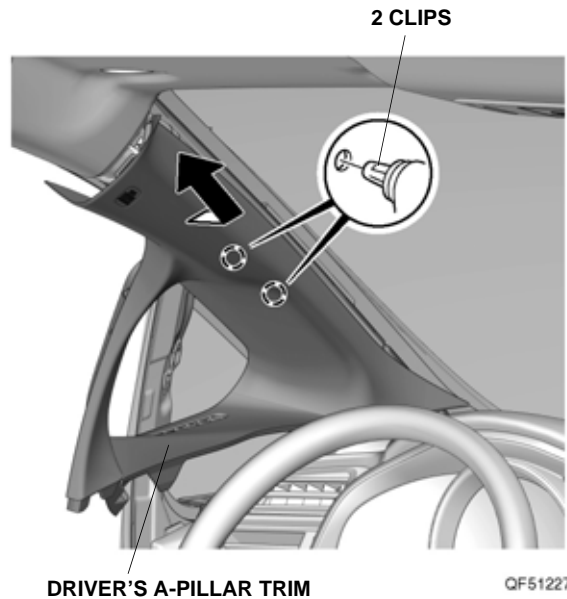

- Remove the remaining upper clip from the driver's A-pillar.


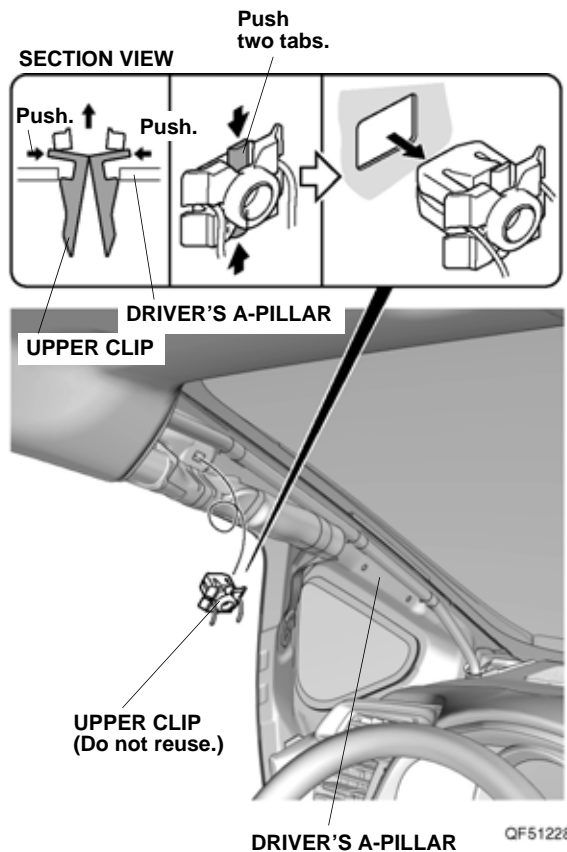


- Remove the upper clip from the driver's A-pillar trim.

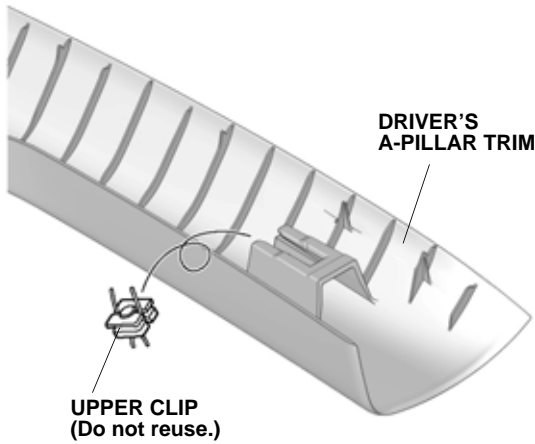


QF51229AH

- Install the new clip (supplied) to the driver's A-pillar trim.

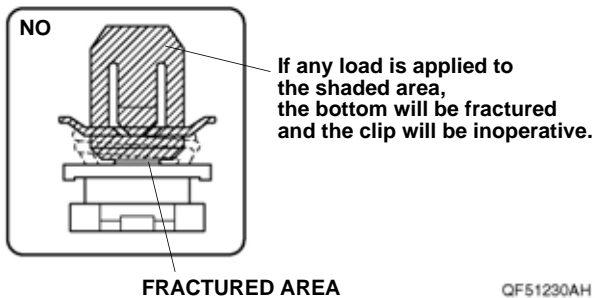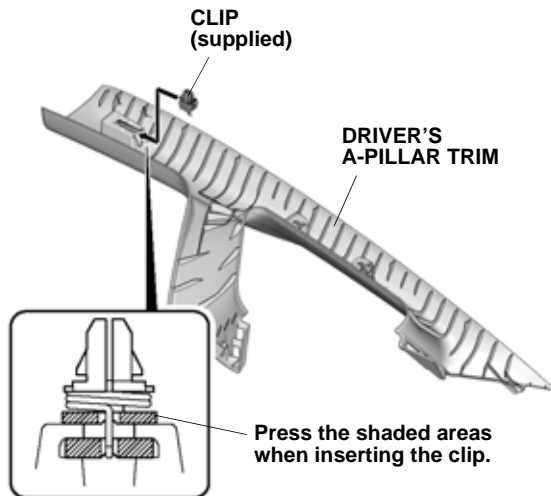


QF51230AH

- Pull away the door opening seal, and remove the driver's dashboard side lid.

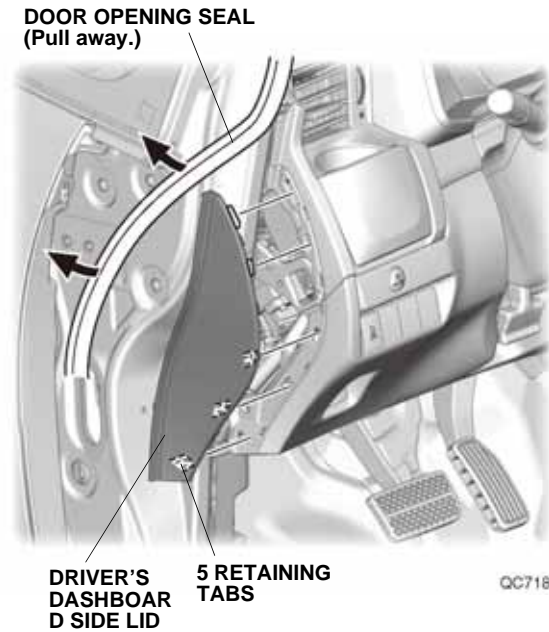


QC71818AJ

- Remove the driver's dashboard lower cover, and unplug the vehicle connectors.

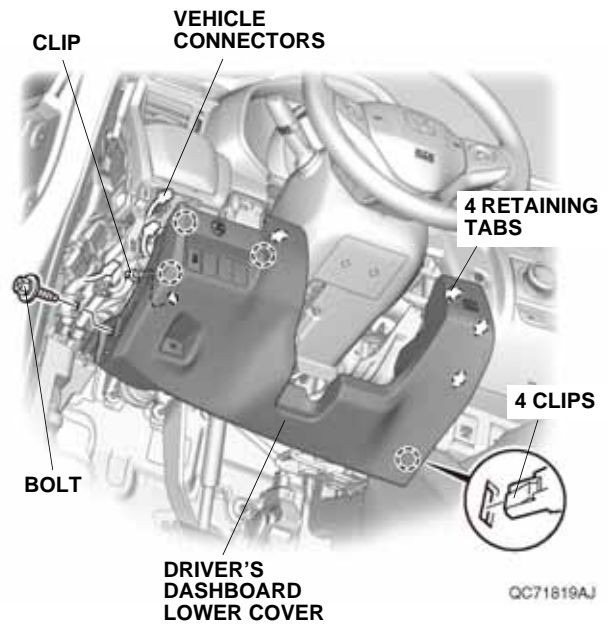


QC71819AJ


11. Pull away the door opening seal, and remove the driver's front door sill trim.

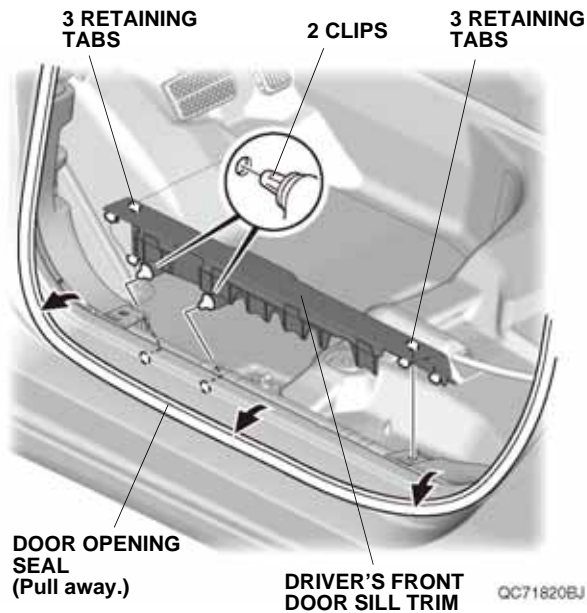


12. Pull away the door opening seal, and remove the driver's kick panel.

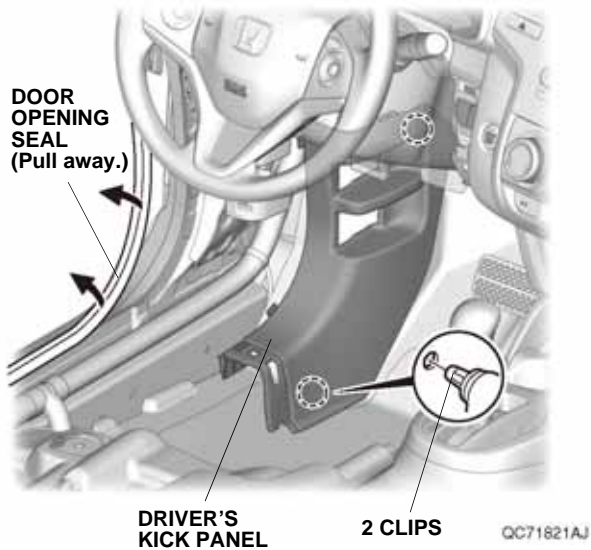


13. Lower the steering wheel. Attach the masking tape to the upper column cover as shown.

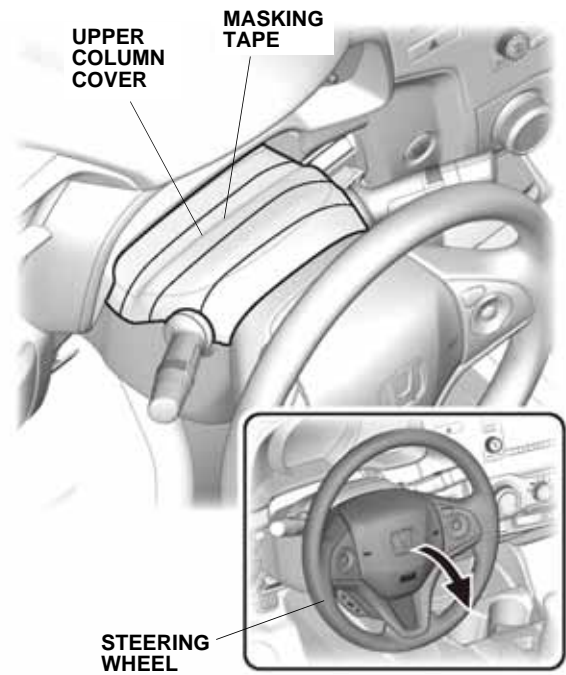


14. Turn the steering wheel 90° clockwise. Using a plastic trim tool, release the retaining tab.

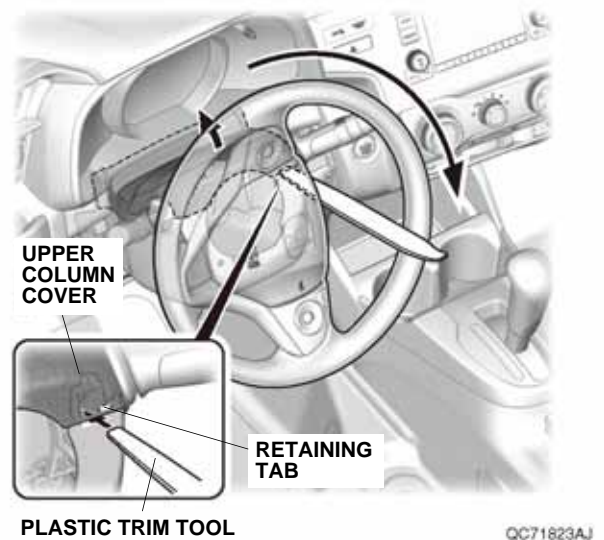


15. Turn the steering wheel 180° counterclockwise. Using a plastic trim tool, release the retaining tab.

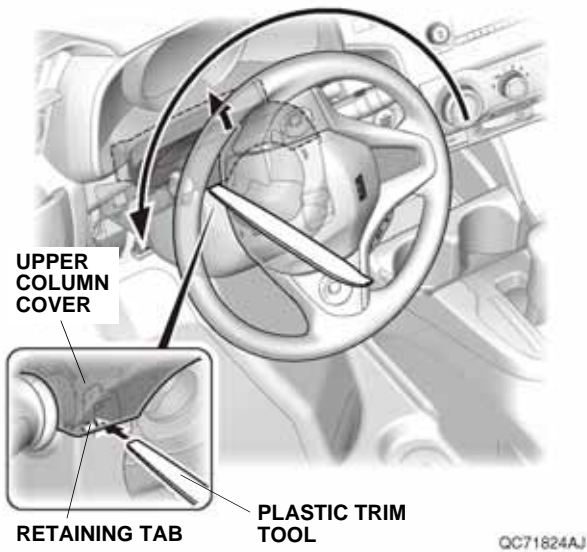


16. Remove the upper column cover.

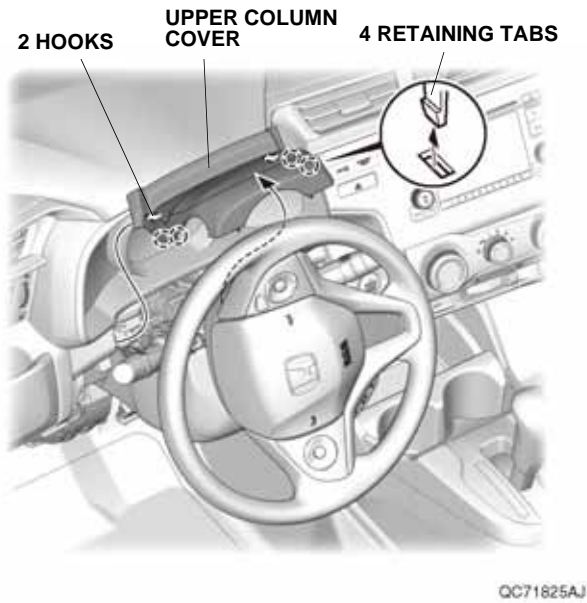


17. Remove the self-tapping screw from the lower column cover.

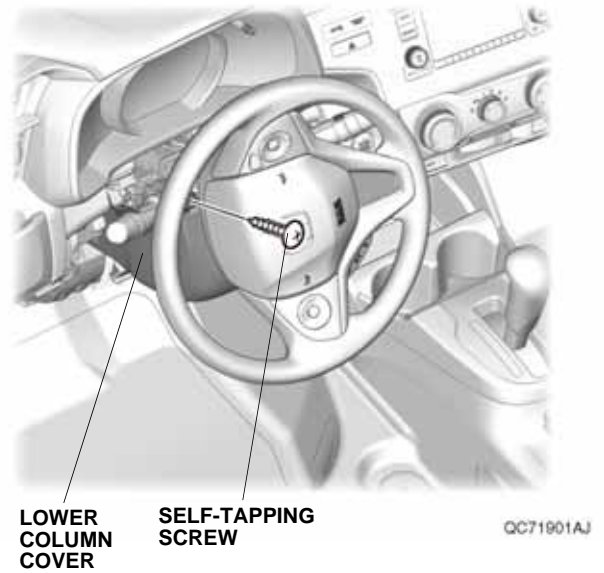

18. Turn the steering wheel 180° clockwise, and remove the self-tapping screw from the lower column cover.

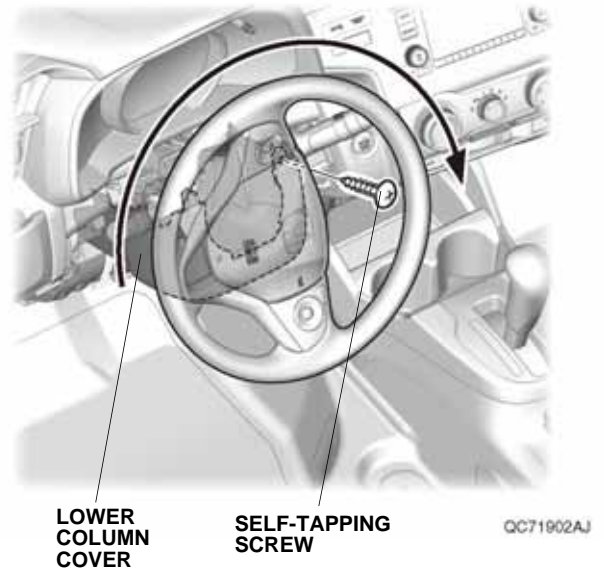


19. Remove the lower column cover.

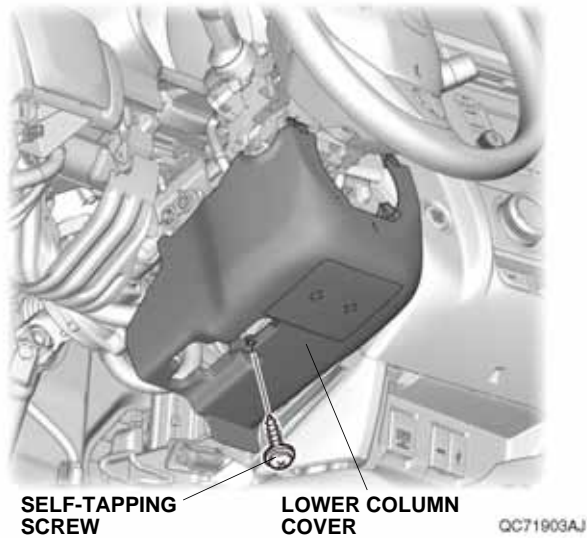


Installing the Antenna


20. Using scissors, cut one urethane tape in half. Wrap two halves of urethane tape around the antenna cable as shown.
 NOTE: Do not fold the antenna cable.

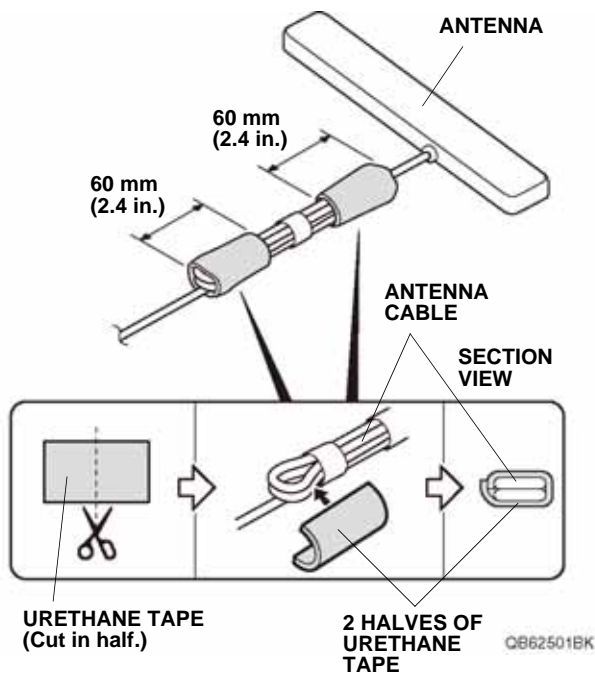


21. Using scissors, cut three urethane tapes in half. Starting near the antenna end of the cable, wrap five halves of urethane tape around the antenna cable at the measurements shown.

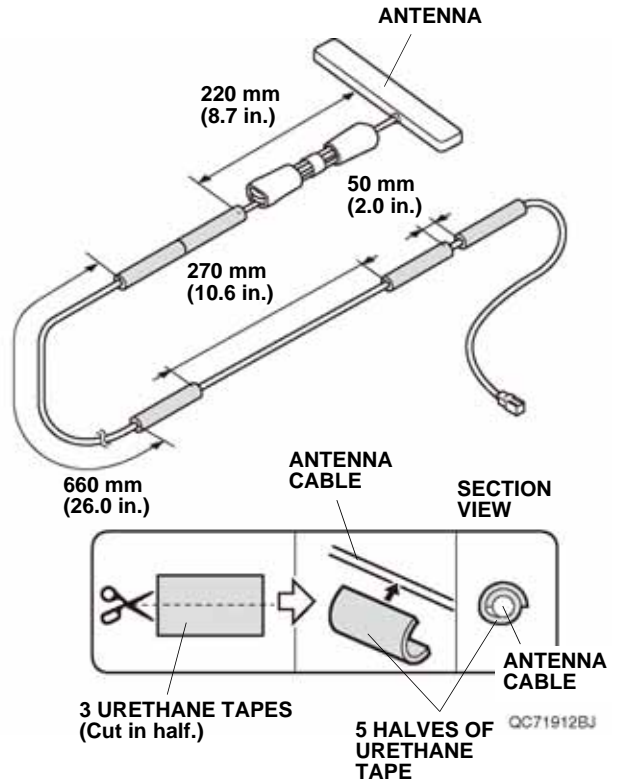

22. Attach the antenna.
 • Attach masking tape to the windshield as shown.

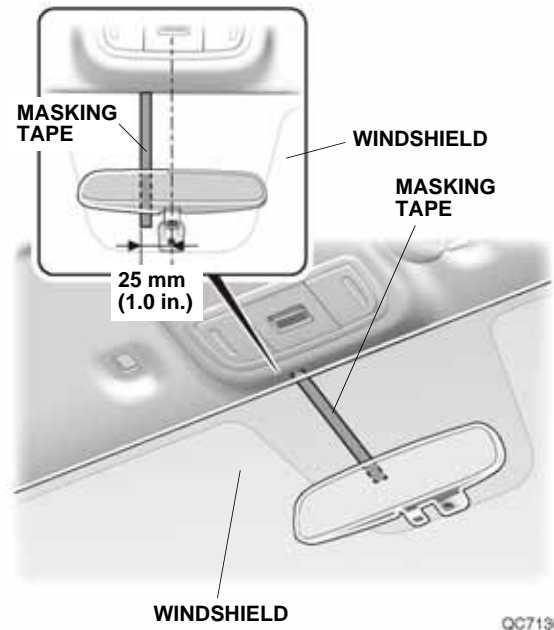


- Fold the adhesive backing of the antenna as shown.

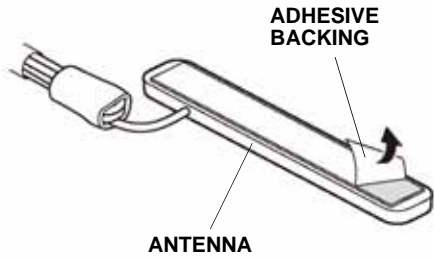


QB51401CH

- Using isopropyl alcohol on a shop towel, clean the windshield where the antenna will attach.
- Attach the antenna with masking tape. Adjust the position of the antenna so there is equal spacing on both sides.

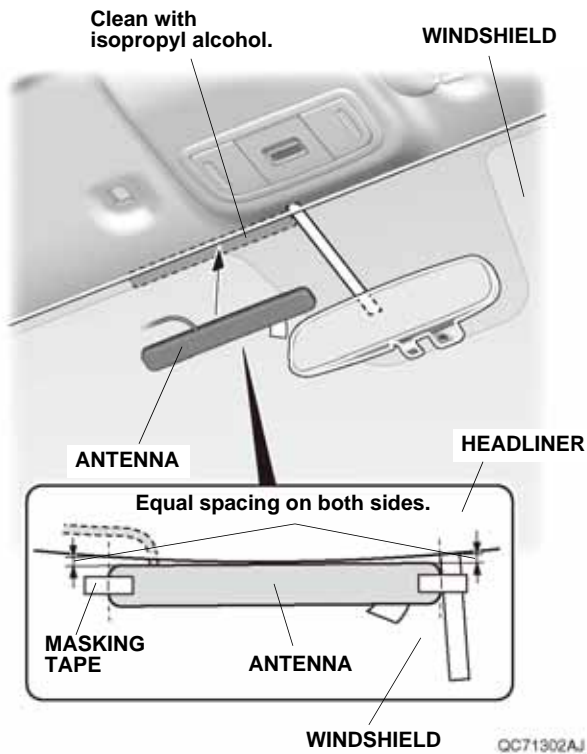

QC71302AJ


- Carefully remove the adhesive backing from the antenna, and attach the antenna to the windshield. Press and hold the antenna firmly in place for 30 seconds.
- Remove the masking tape.

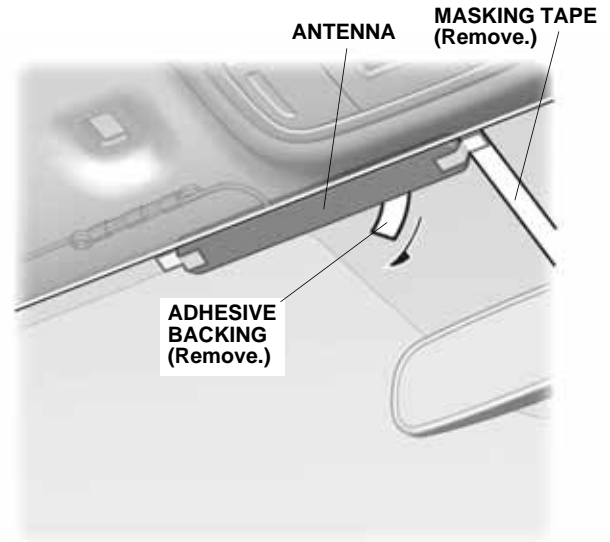

QC71303AJ


23. Gently pull down the headliner, and tuck the antenna cable under the headliner.

NOTE: Be careful not to crease the headliner.

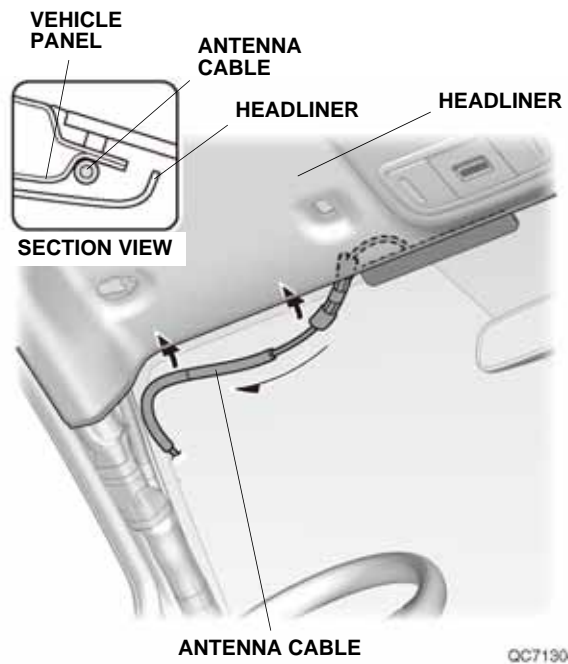


QC71304BJ


24. Route the antenna cable as shown. Secure the antenna cable to the vehicle harness with four wire ties.

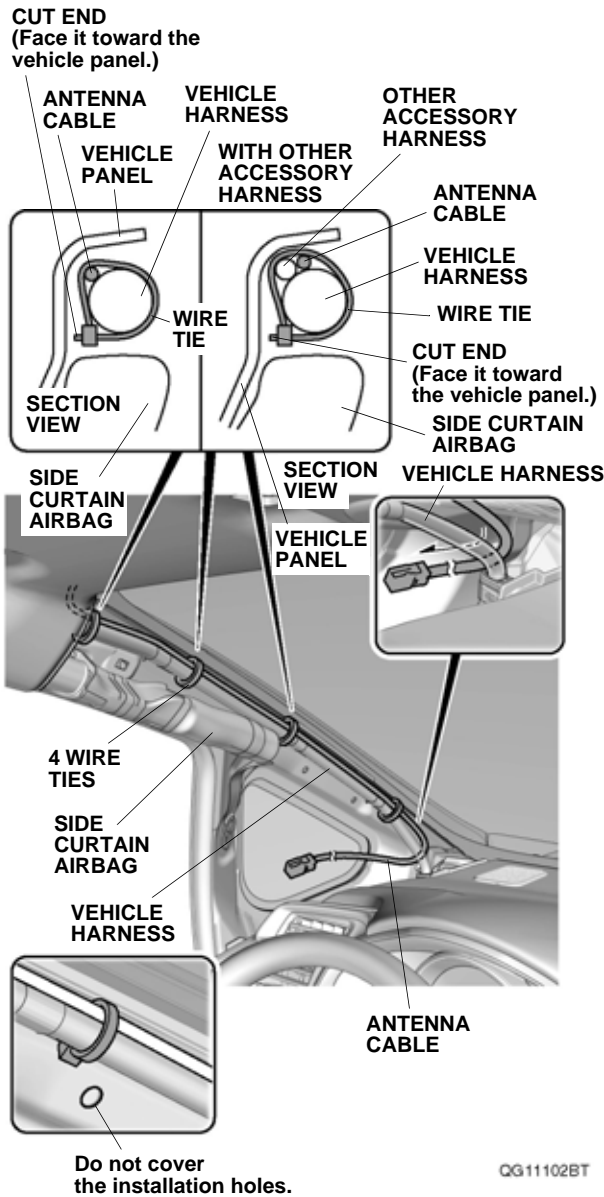

25. Pull away the door opening seal. Route the antenna cable, and tuck the antenna cable between the vehicle panel and the dashboard.

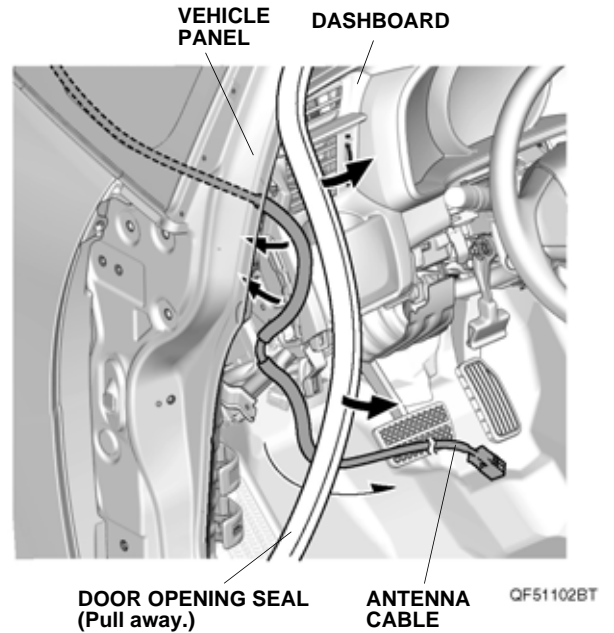


26. Using isopropyl alcohol on a shop towel, clean the vehicle panel where the aluminum tapes will attach.

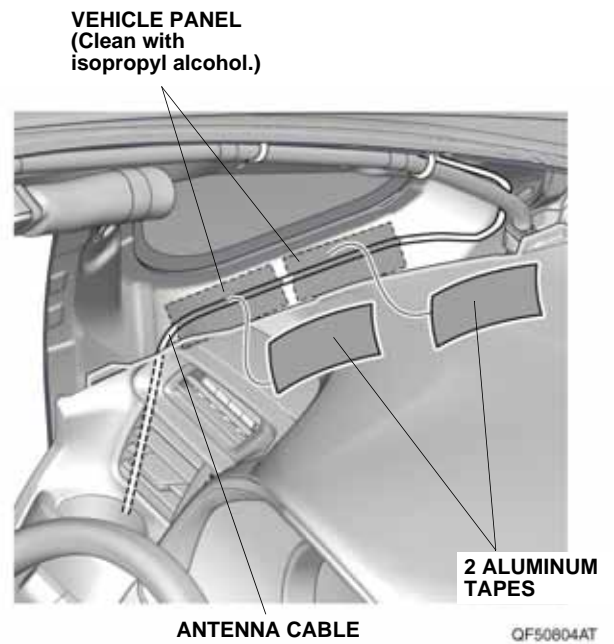


27. Secure the antenna cable to the vehicle panel with the two pieces of aluminum tape.

28. Secure the antenna cable to the vehicle panel with one wire tie. If the other accessory harness is already secured to the vehicle panel, secure the antenna cable to the other accessory harness with one wire tie.

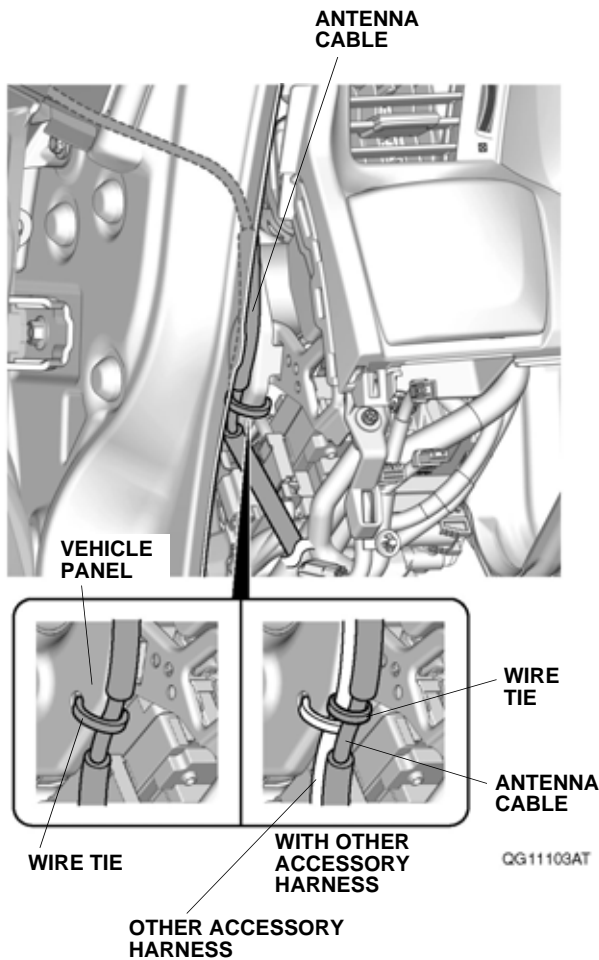


29. Secure the antenna cable to the vehicle harness with one wire tie.

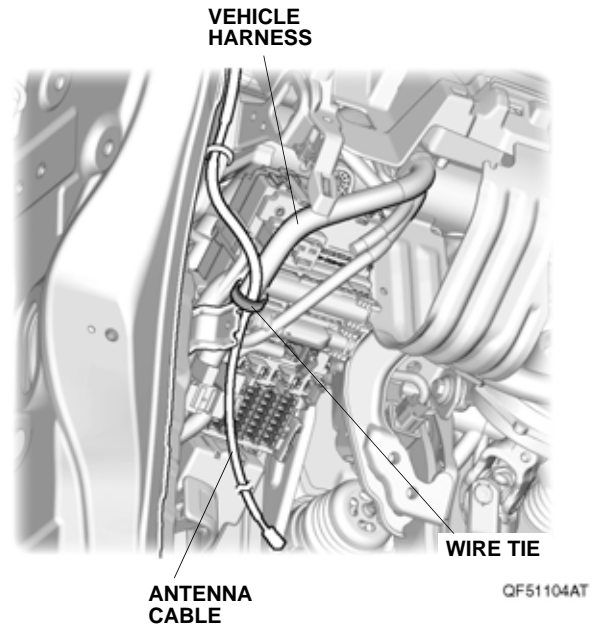


Routing the Engine Starter Harness

30. Using isopropyl alcohol on a shop towel, clean the engine starter harness fuse block where the fuse label will attach.

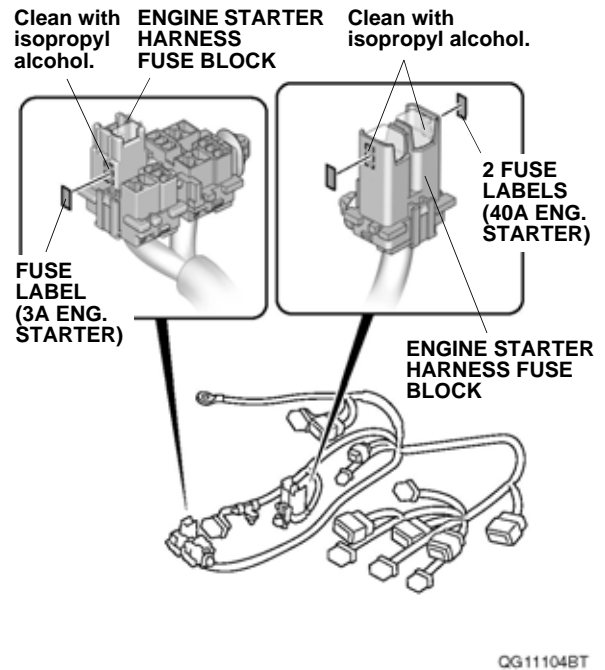


31. Apply three fuse labels to the engine starter harness fuse block.

32. Install the three relays to the engine starter harness relay block.

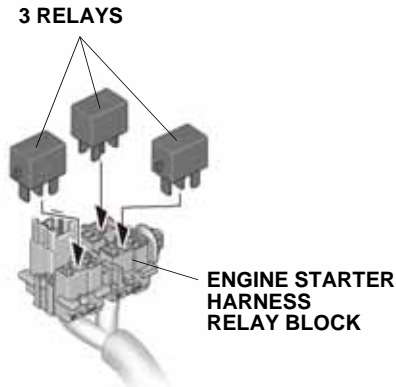


QC71307AJ

33. Using scissors, cut one urethane tape as shown. Wrap the cut urethane tape around the engine starter harness 5-pin connector.

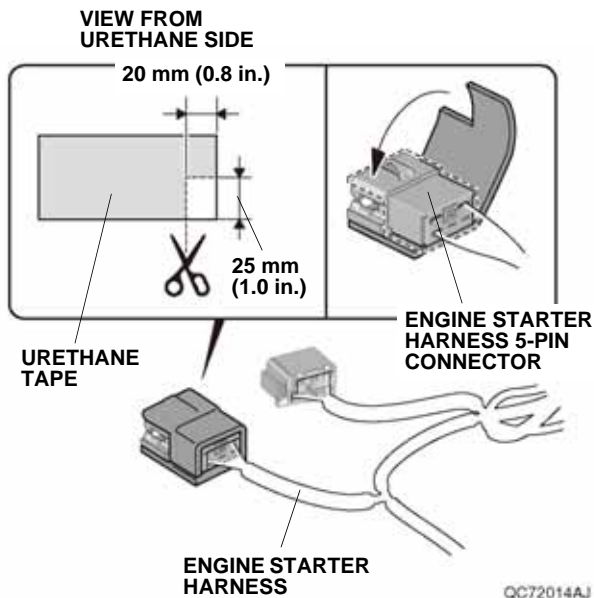


QC72014AJ

34. Route the engine starter harness along the vehicle harness. Remove the bolt, and install the engine starter harness ground terminal with one ground bolt.

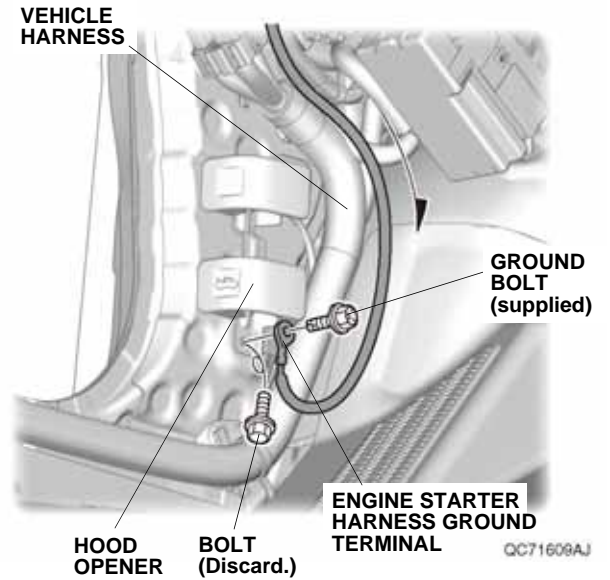


QC71609AJ

35. Secure the engine starter harness to the vehicle harness with two wire ties.

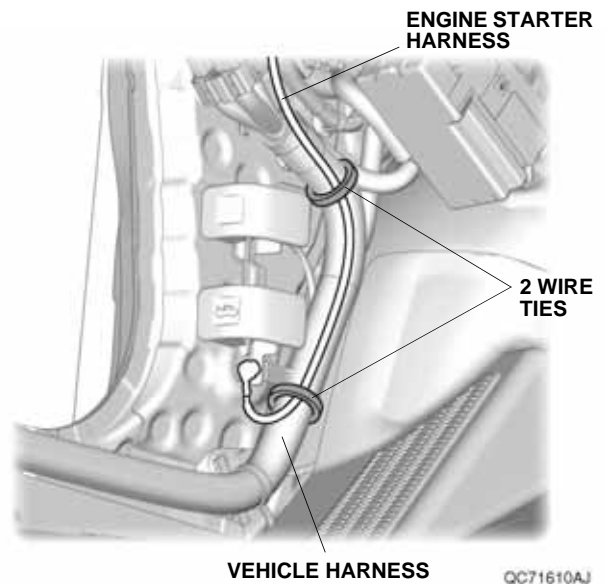


QC71610AJ


36. Release the sub fuse box from the sub fuse box bracket.

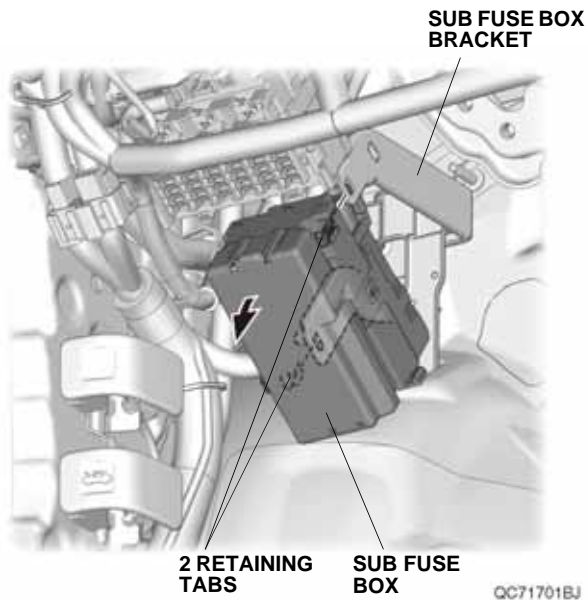


37. Remove the sub fuse box bracket.

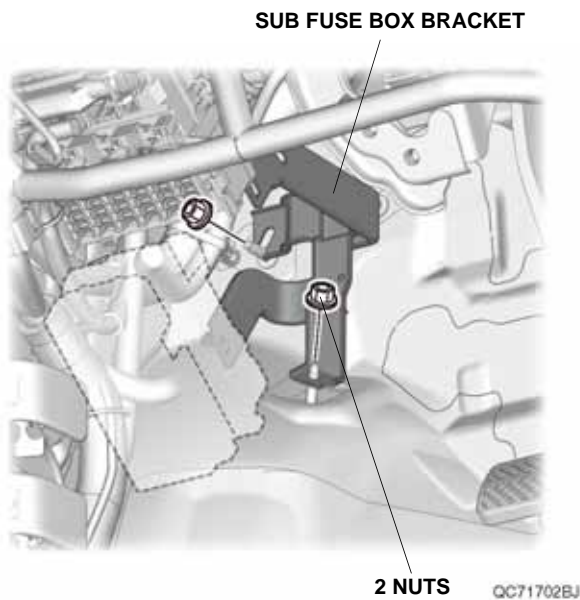

38. Plug the antenna cable connector and the engine starter harness 28-pin connector into the control unit.

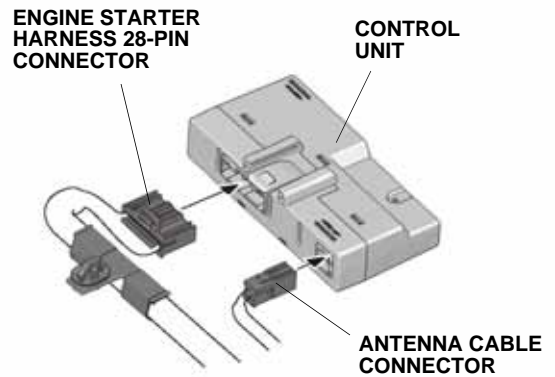


39. Using isopropyl alcohol on a shop towel, clean the control unit bracket where the urethane tape will attach.

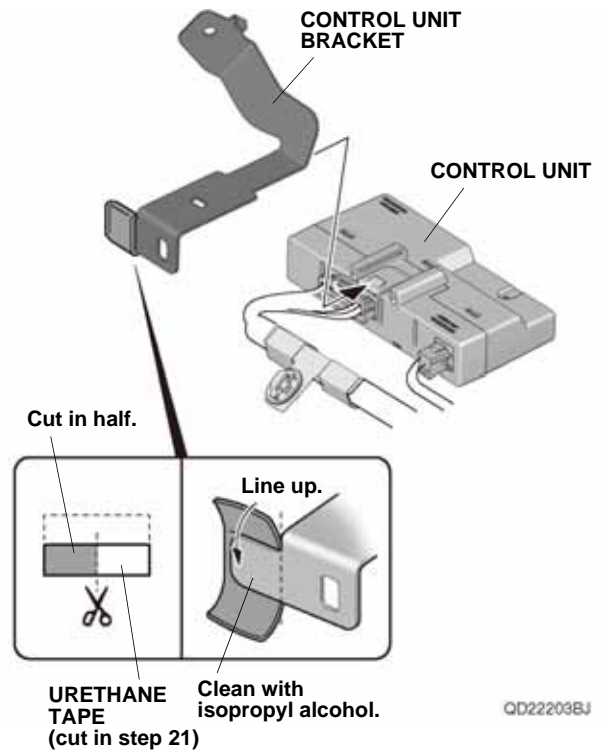


40. Using scissors, cut the remaining urethane tape in step 21 in half. Wrap the cut urethane tape around the control unit bracket as shown.
41. Install the control unit bracket to the control unit.

42. Attach the engine starter harness clip to the control unit bracket.

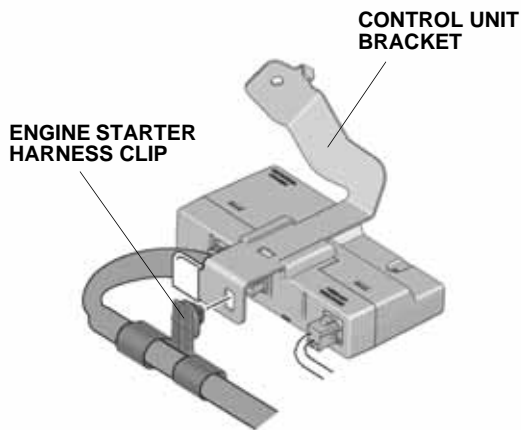

QD22204AJ


43. Secure the sub fuse box bracket (removed in step 37) and the control unit bracket in the order shown.

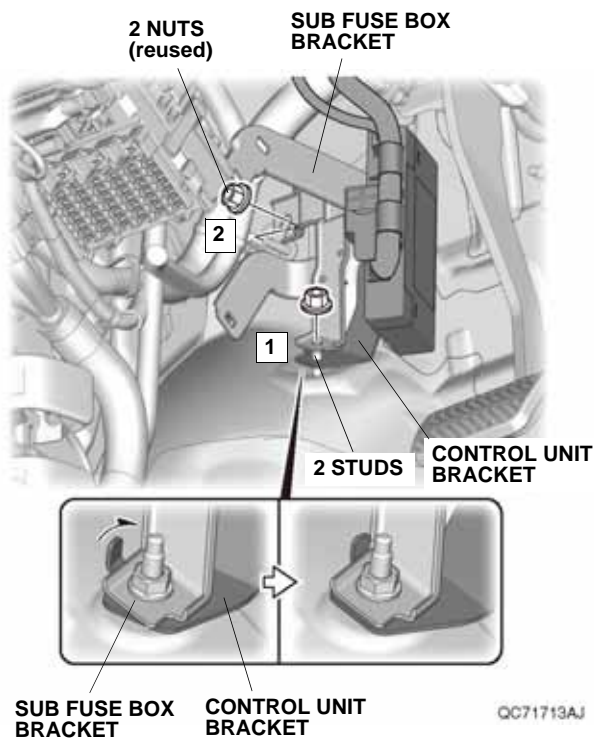

QC71713AJ


44. Install the sub fuse box released in step 36.

45. Secure the engine starter harness fuse block to the hole in the sub fuse box bracket.

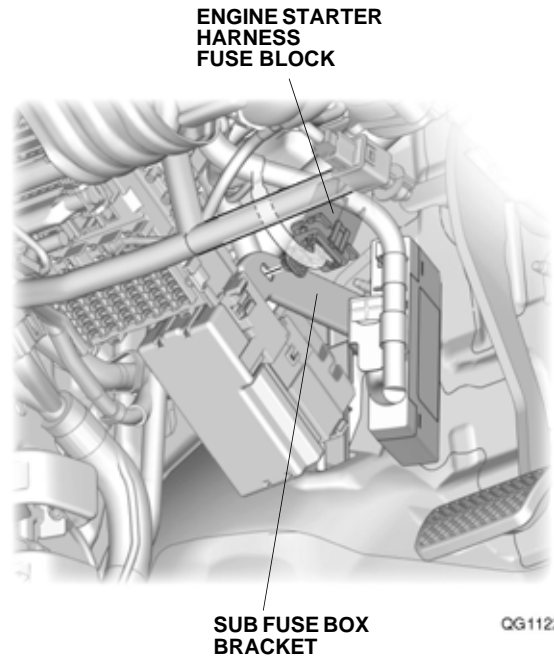


QG11222AT

46. Plug the engine starter harness 4-pin connector into the fuse box.

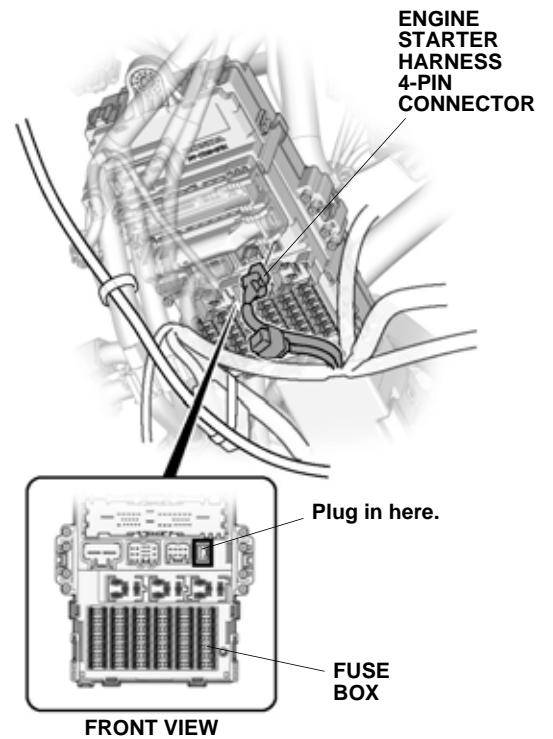


QG11106AT


47. Unplug the vehicle 25-pin connector, and plug it into the engine starter harness 25-pin connector. Plug the engine starter harness 25-pin connector into the vehicle 25-pin connector.

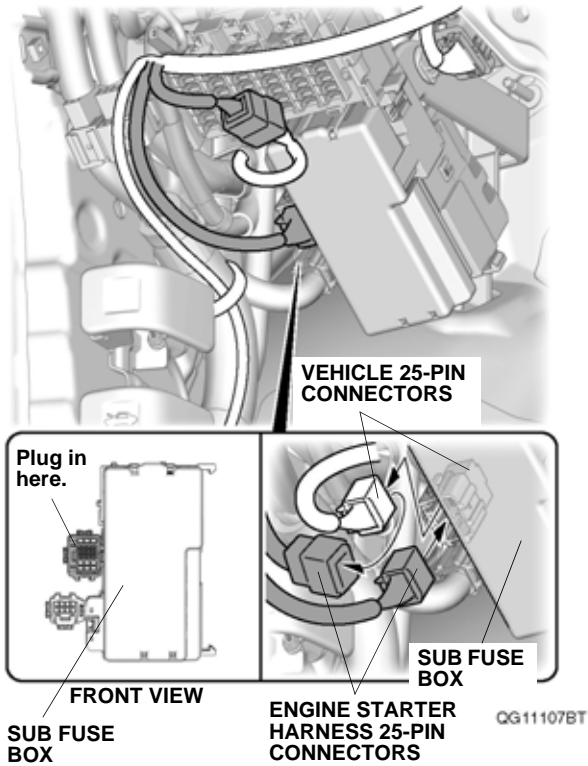


48. Secure the 25-pin connectors and the engine starter harness to the vehicle harness with one wire tie and one long wire tie.

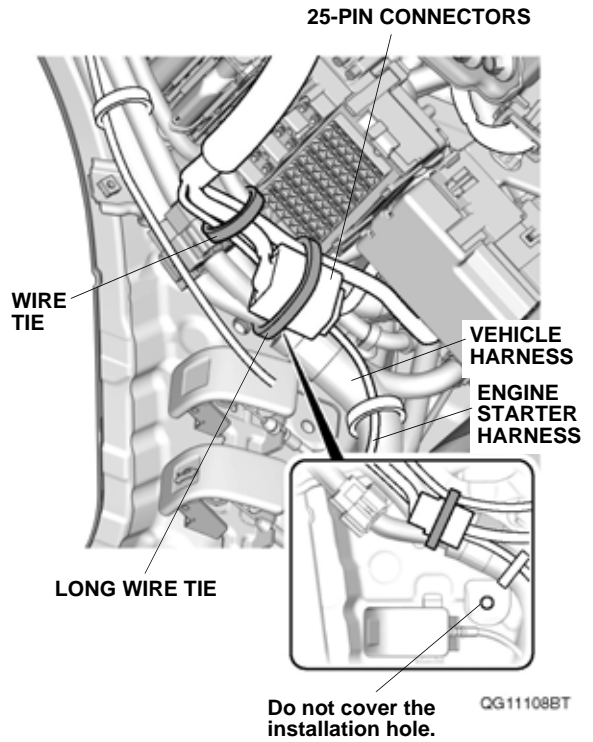


49. Route the engine starter harness behind the steering shaft as shown. Secure the engine starter harness relay block to the hole in the vehicle panel.

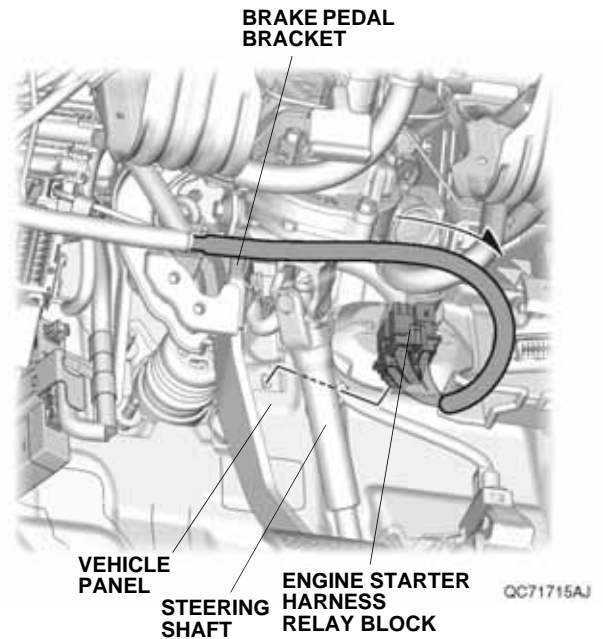


50. Line up the white tape on the engine starter harness with the vehicle clip, and secure the engine starter harness to the vehicle harness with four wire ties.

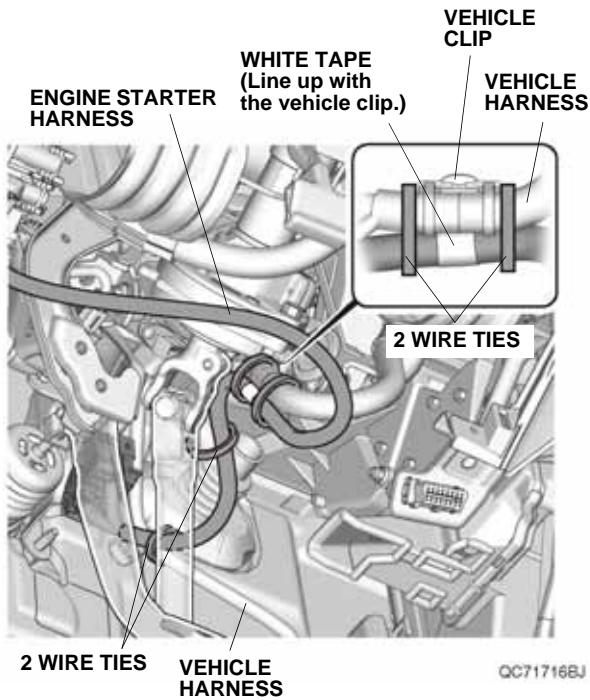


51. Secure the engine starter harness to the steering hanger beam with one wire tie.

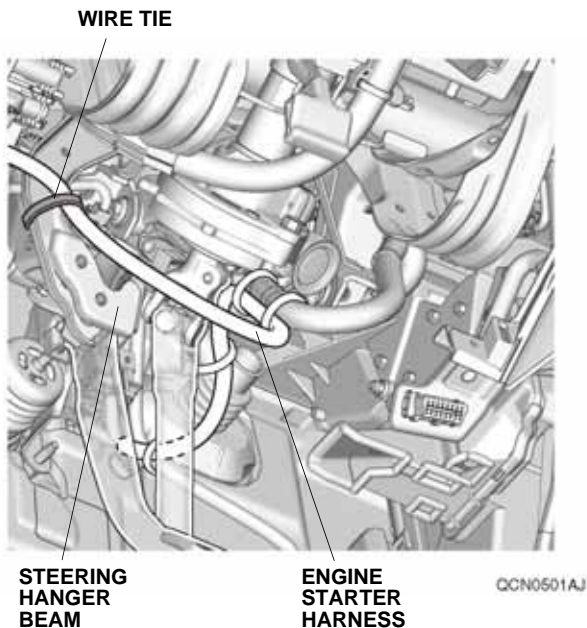

52. Route the engine starter harness along the vehicle harness. Line up the white tape on the engine starter harness with the end of the vehicle harness protector, and secure the engine starter harness to the vehicle harness with one wire tie.

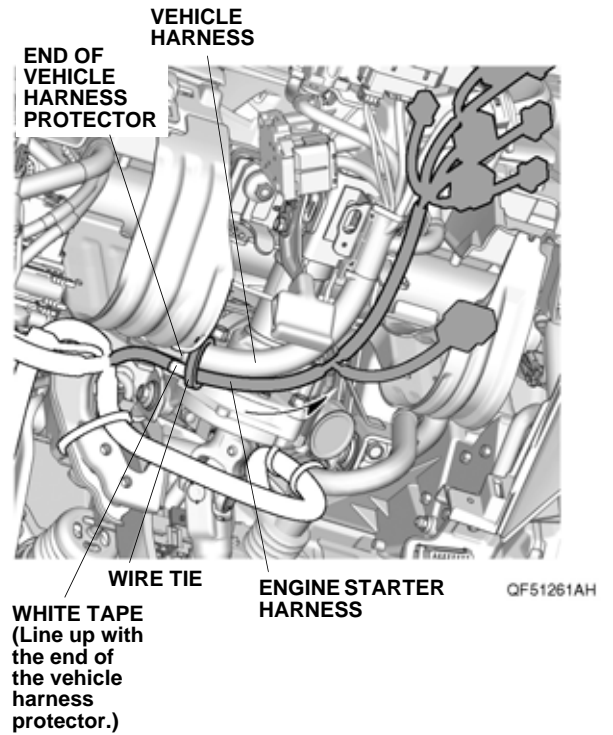


53. Unplug the vehicle 10-pin connector from the wiper switch, and plug it into the engine starter harness 10-pin connector. Plug the engine starter harness 10-pin connector into the wiper switch.

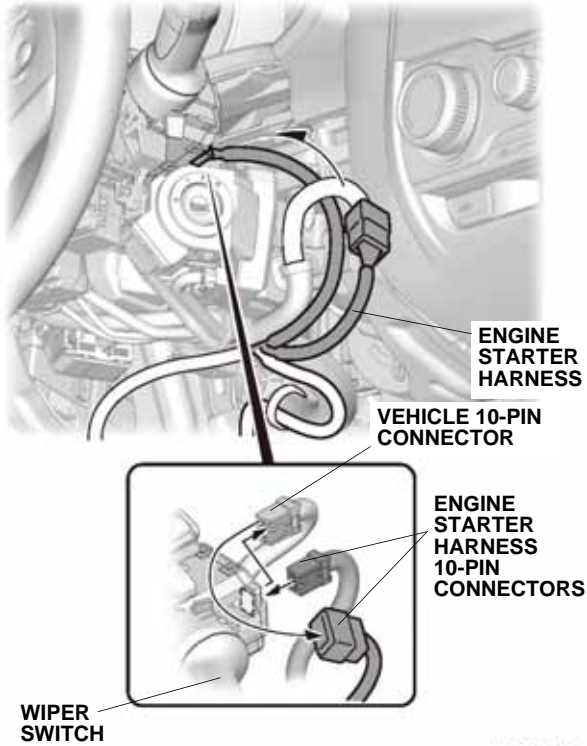


QC72008BJ

54. Line up the white tape on the engine starter harness with the vehicle clip, and secure the engine starter harness and the 10-pin connectors to the vehicle harness with one wire tie.

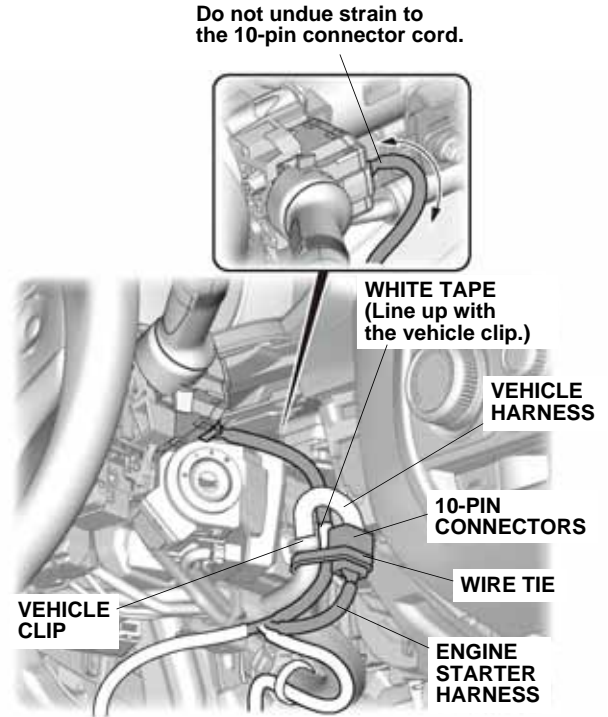


QC72009BJ


55. Unplug the vehicle 12-pin connector from the combination light switch, and plug it into the engine starter harness 12-pin connector. Plug the engine starter harness 12-pin connector into the combination light switch.

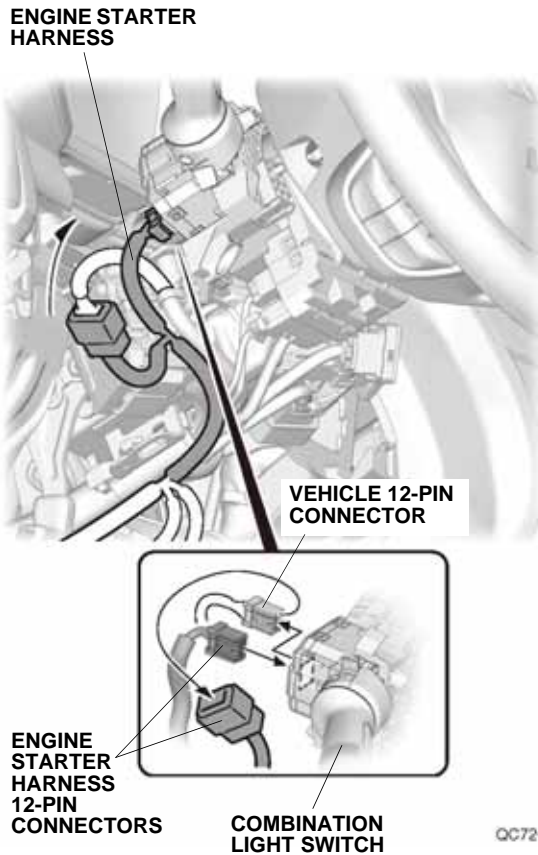


56. Line up the white tape on the engine starter harness with the vehicle clip, and secure the engine starter harness and the 12-pin connectors to the vehicle harness with one wire tie.

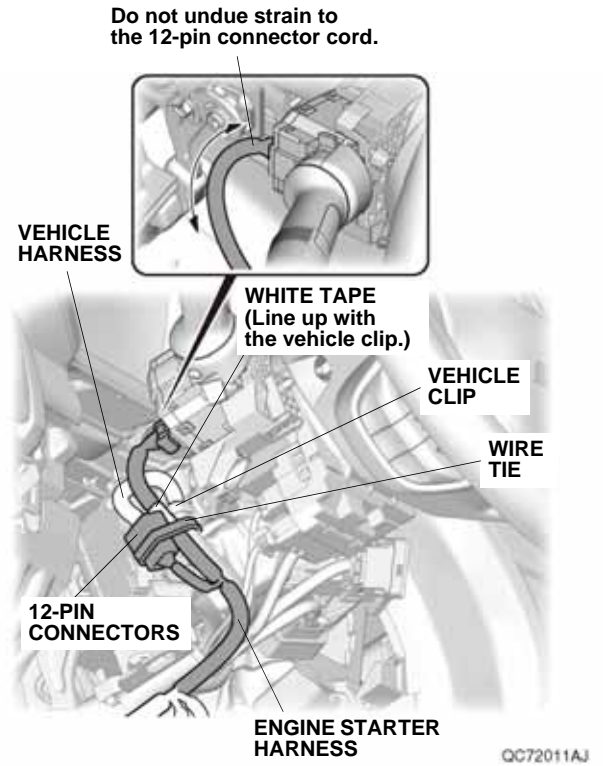

57. Unplug the vehicle 7-pin connector, and plug it into the engine starter harness 7-pin connector. Plug the engine starter harness 7-pin connector into the vehicle 7-pin connector.

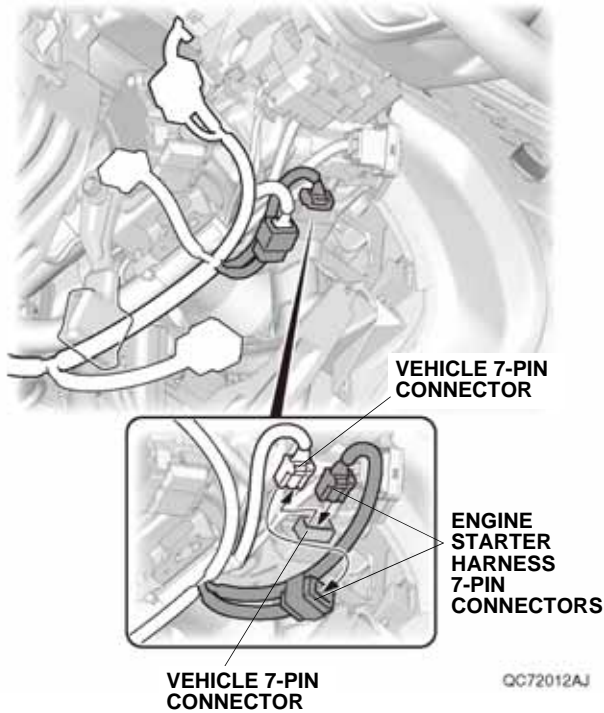


58. Secure the 7-pin connectors to the vehicle harness with one wire tie.


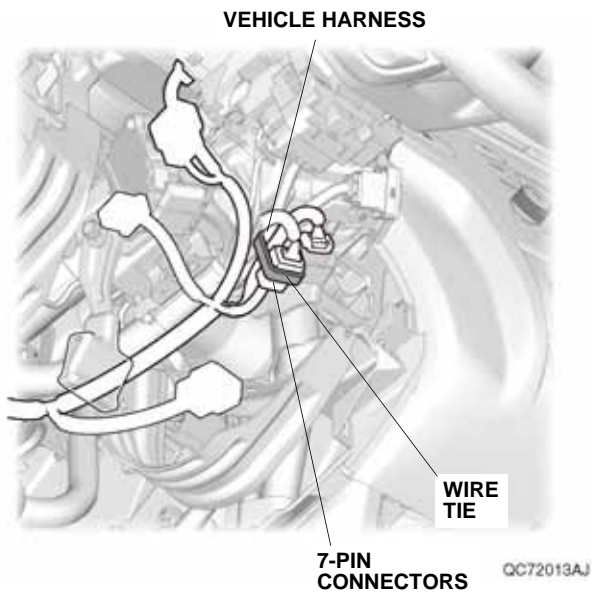


59. Unplug the vehicle 5-pin connector, and plug it into the engine starter harness 5-pin connector. Plug the engine starter harness 5-pin connector into the vehicle 5-pin connector.

NOTICE: Make sure the engine starter harness 5-pin connector is securely connected to the vehicle 5-pin connector. A loose connection can cause the engine to stall during driving.

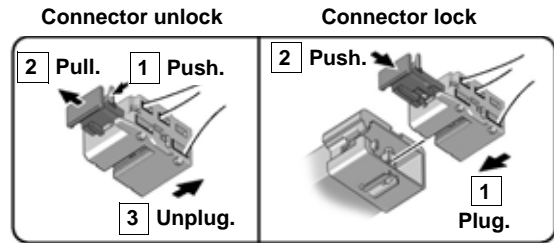


60. Line up the white tape on the engine starter harness with the vehicle clip, and secure the engine starter harness and the 5-pin connectors to the vehicle harness with one wire tie and one long wire tie. **NOTE:** Make sure that the connectors and harness are not pinched, or interfering the steering wheel when moved for adjustment.

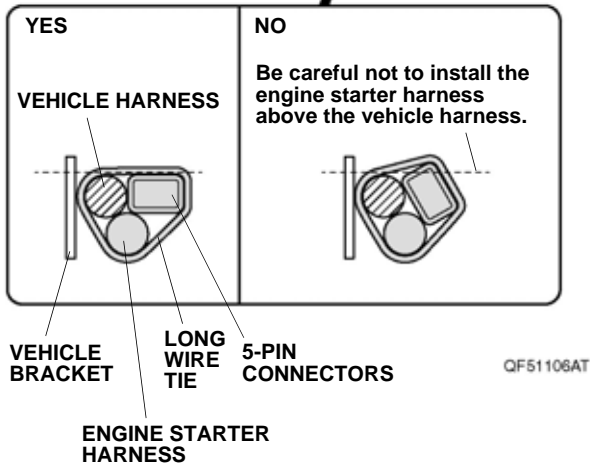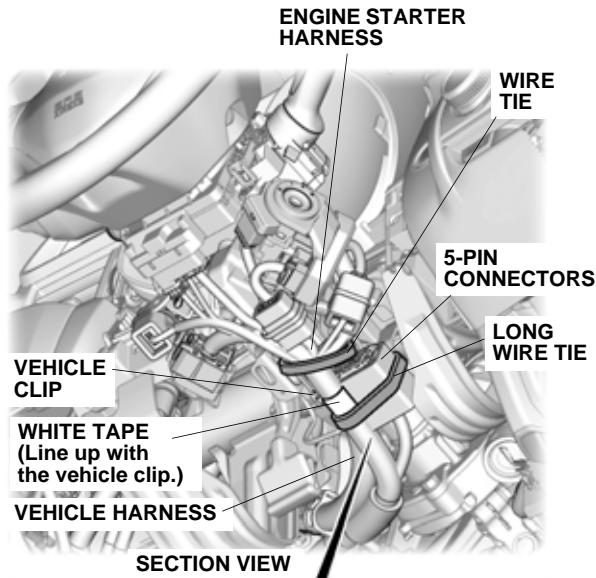


QF51106AT

61. Secure the engine starter harness and the antenna cable to the knee bolster with one long wire tie.

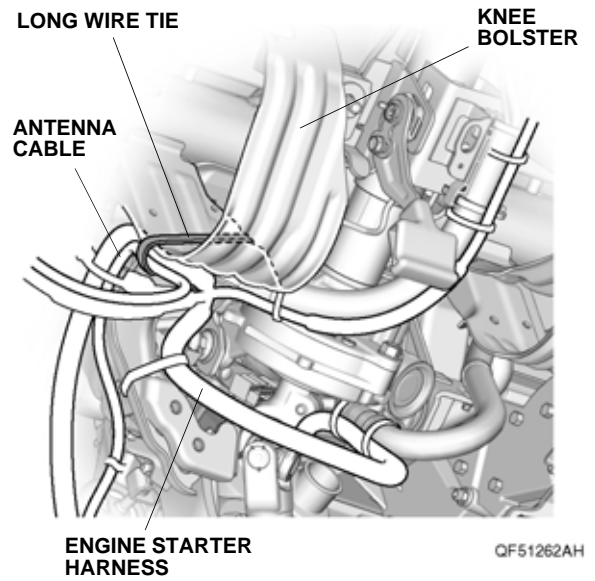


62. Secure one wire tie with clip to the antenna cable and the engine starter harness at the white tape, and secure the wire tie with clip to the hole in the steering hanger beam.

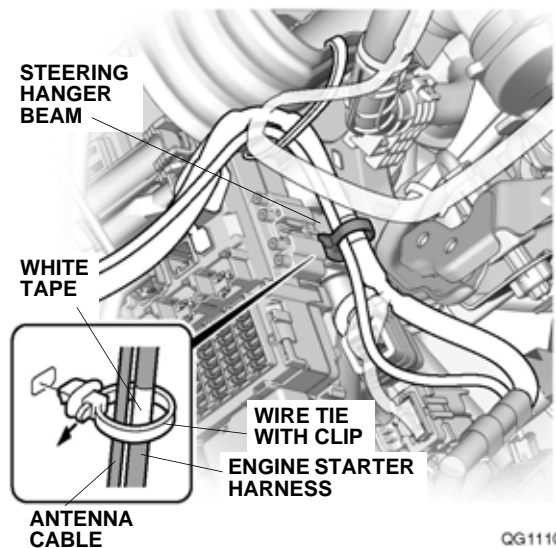


QG11109BT

63. Bundle up the excess antenna cable as shown, and wrap one urethane tape around the antenna cable. Secure the antenna cable to the engine starter harness with one wire tie.
NOTE: Do not fold the antenna cable.

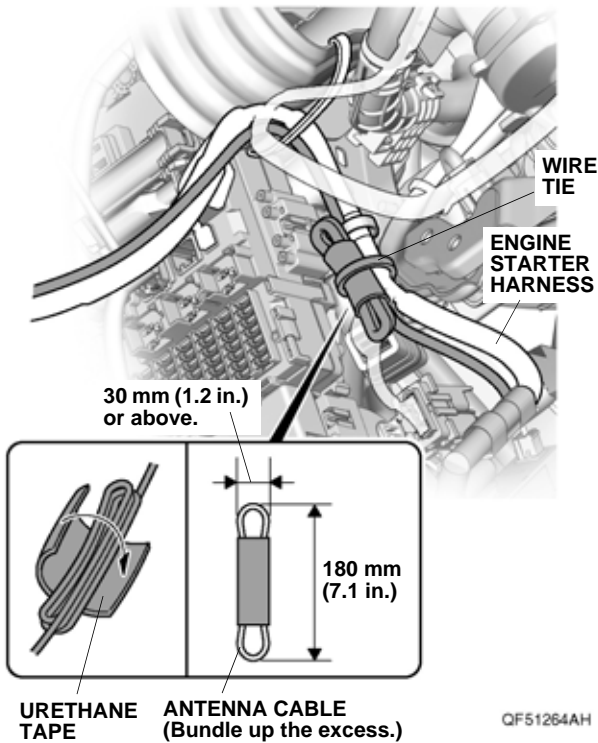


64. Using isopropyl alcohol on a shop towel, clean the lower column cover where the urethane tape will attach.

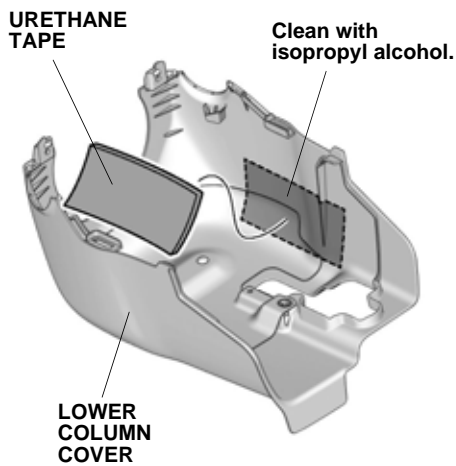

65. Attach the urethane tape to the lower column cover as shown.

66. Using isopropyl alcohol on a shop towel, clean the lower column cover where the urethane tape will attach.

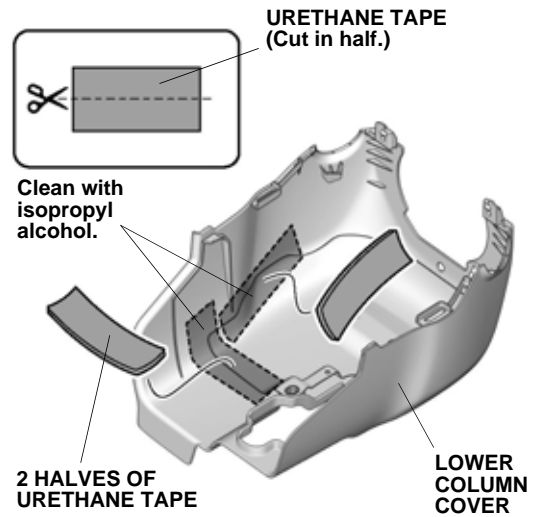

67. Using scissors, cut one urethane tape in half. Attach the two halves of urethane tape to the lower column cover as shown.
68. Using isopropyl alcohol on a shop towel, clean the hood where the caution label will attach.




69. Remove the adhesive backing from the caution label, and attach the caution label to the hood as shown.
70. Check that all wire harnesses are routed properly and all connectors are plugged in.
71. Check the overlap between the headliner and the driver's A-pillar trim. Refer to the service information. If necessary, to adjust the overlap.
72. Install all removed parts.
73. Connect the negative cable to the battery.
74. Press and hold the audio unit power button for 2 seconds to restore the audio and navi (if equipped) system functions.
75. Set the clock.
76. If necessary, restore the systems back to normal operation as described in the service information.
77. Perform the "REMOTE ENGINE STARTER REGISTRATION" and the "Check the Operation of the Remote Engine Start System II."

REMOTE ENGINE STARTER REGISTRATION


NOTE: Register after making sure the HDS has been upgraded to the latest version as described in the Service News.

1. Acquire the PCM-Code from the Interactive Network.
2. Connect the HDS to the vehicle, then turn on the ignition. Start the Diagnostic System.

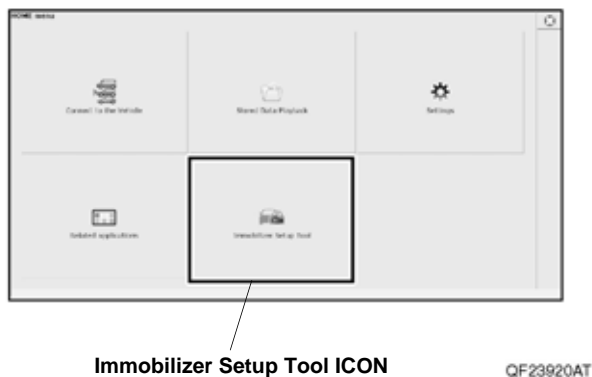

3. Click the Immobilizer Setup Tool icon.


4. Start the Immobilizer Setup Tool, and click the Start icon.

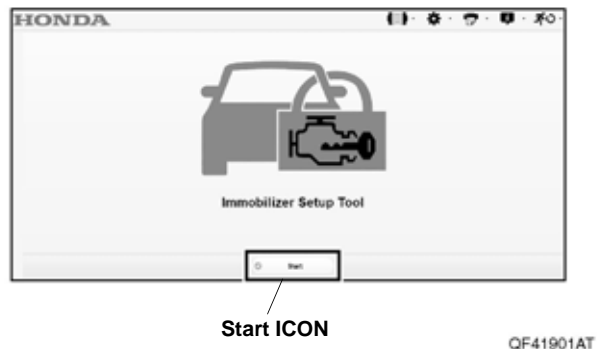


5. Click the OK icon.



6. Enter the PCM-Code, then click the OK icon.

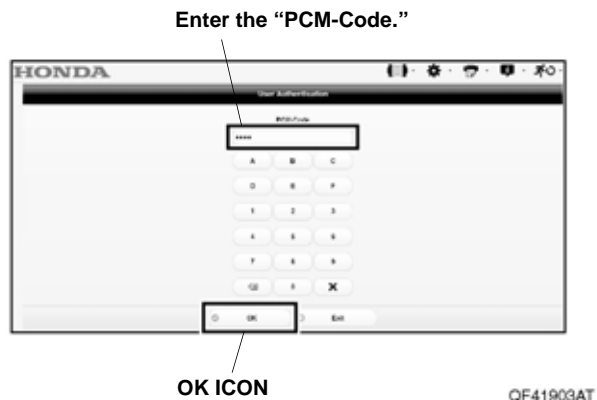

7. Select "R/C ENG STARTER."

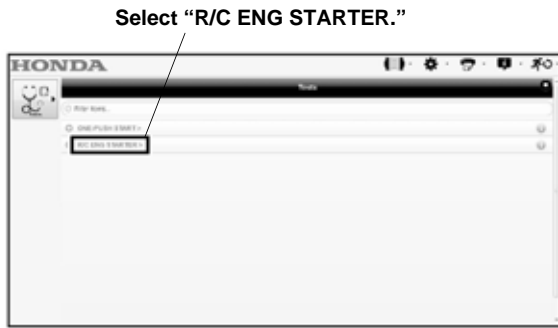

QF41904AT


8. Confirm that "REGISTER REMOTE CONTROL ENGINE STARTER UNIT" is displayed, then click the "➤" icon.



"➤" ICON


QF23906AT

9. The following message will display: "The registration of the Remote Control Engine Starter Unit has been completed." Turn the ignition switch OFF.

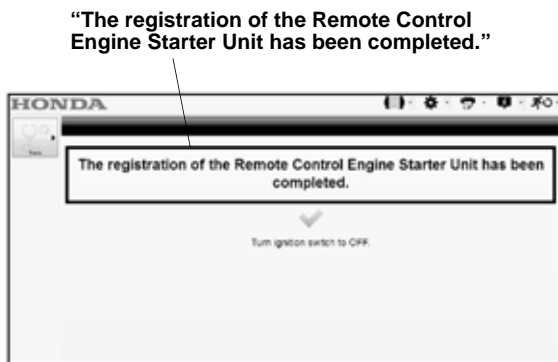


QF23907AT

10. The following message will display: "Check that engine can be started by the Transmitter." Click the OK icon.

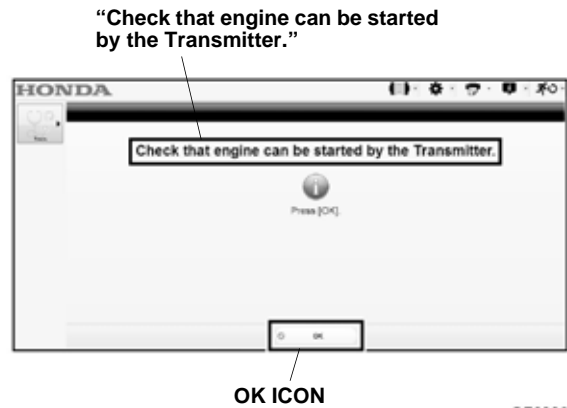

QF23908AT

11. The following message will display: "Turn ignition switch to ON." Turn the ignition switch ON.

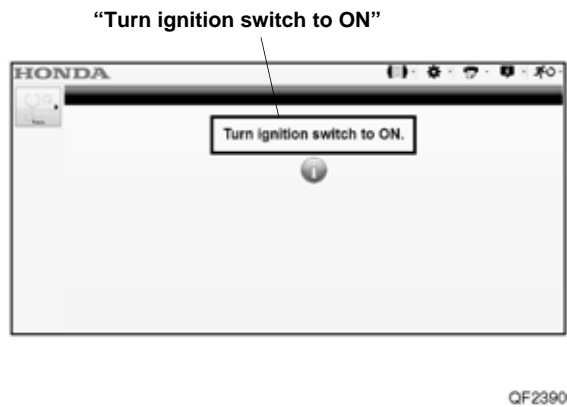

QF23909AT

12. Confirm that "☑" is displayed.



QF23910AT

13. Do the Check the Operation of the Remote Engine Start System II on page 25. Clear the DTCs, then disconnect the HDS.

Check the Operation of the Remote Engine Start System II

Operating Conditions

- The hood is closed.
- The shift lever is in Park.
- The ignition is turned OFF and the key is outside the vehicle.
- All doors and tailgate are closed and locked.

Inspection

1. Press the ENGINE button on the transmitter and release. Within 2 seconds, press the Lock/Start button on the transmitter.

The engine should start if all operating conditions are met.

Does the engine start?

Yes - Operation is normal.

No:

- Make sure all Operating Conditions are met.
- Check the engine starter harness connections.
- Connect the HDS and check for an indicated failure.
(Refer to the service information for details.)

2. Press the ENGINE button on the transmitter and release. Within 2 seconds, press the Unlock/Stop button. The engine should stop.

Does the engine stop?

Yes - Operation is normal.

No - Check the engine starter harness connections.

3. After the engine has stopped, start the engine again and check that the engine stops after each of the following conditions:

NOTE: After each test the ignition key must be cycled, or the driver's door must be opened and closed.


- Move the shift lever out of the Park.
- Unlock or open the doors or the tailgate.
- Open the hood.
- Insert the key in the ignition.
- Press on the brake pedal.

Does the engine stop after each of these tests?

Yes - Operation is normal.

No - Check the engine starter harness connections.

4. Check that the power windows do not work and the shift lever does not move to any position when the engine is started with the transmitter.
5. Start the engine again, press the ENGINE button on the transmitter two times, and check the vehicle condition on the display.
6. Check the operation of the transmitter when the vehicle is 120 m (400 ft.) away and in direct sight.
7. Press the Unlock/Stop button on the transmitter and verify that the doors unlock. Press the Lock/Start button and verify that the doors lock.
8. Check that the engine can start by the vehicle key and that the wiper and the headlight can be operated normally.

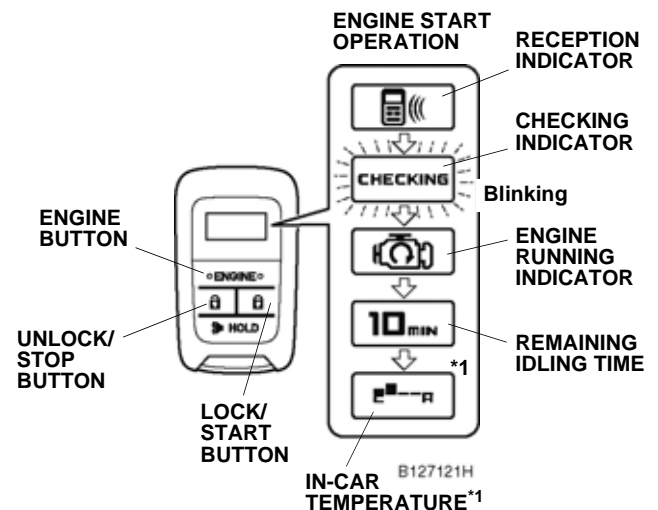

*1 Only on vehicles equipped with the automatic climate control. This indicator is displayed for some vehicles among them.