



INSTALLATION INSTRUCTIONS

Accessory
**FRONT LOWER TRIM
(ALUMINUM)**
P/N 08P46-SZA-100

Application
2009 PILOT


Publications No.
All 39782

Issue Date
JUNE 2008

NOTE: The front lower trim can not be installed on vehicle equipped with full nose mask or front trim.

PARTS LIST

Front lower trim

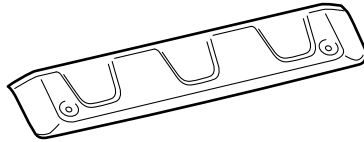

2 Rivnuts



2 Special bolts



2 Washers



2 Spacers



TOOLS AND SUPPLIES REQUIRED

#2 Phillips screwdriver

Ratchet

10 mm Socket

Hex wrench

Pushpin

Drill

3 mm and 10 mm Drill bits

Eye protection (safety goggles, face shield, etc.)


Rivnut tool

Hex wrench

19 mm wrench

Blanket

Illustration of the Front Lower Trim kit Installed on the Vehicle

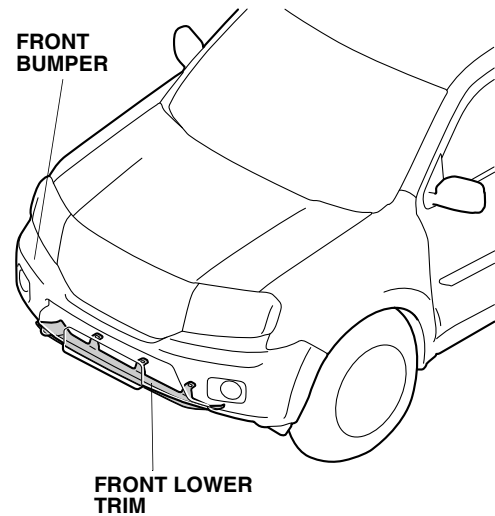


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Be careful not to damage the body paint finish. To prevent damage, place a blanket under the front bumper during the installation.
1. Remove the front bulkhead cover (nine clips).

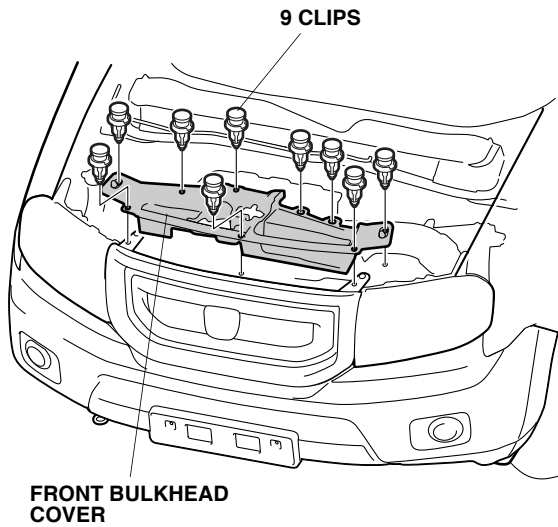

2. Remove the front bumper (nine clips, four bolts, and four self-tapping screws). Have an assistant help you when removing and installing the front bumper. If the vehicle is equipped with the foglight or the front corner sensors, unplug the connectors.

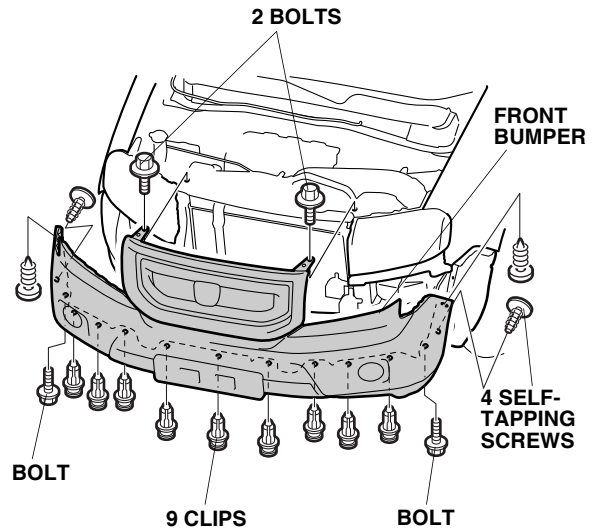


3. Inside the front bumper, mark the center of the two scribe marks with a pushpin as shown.

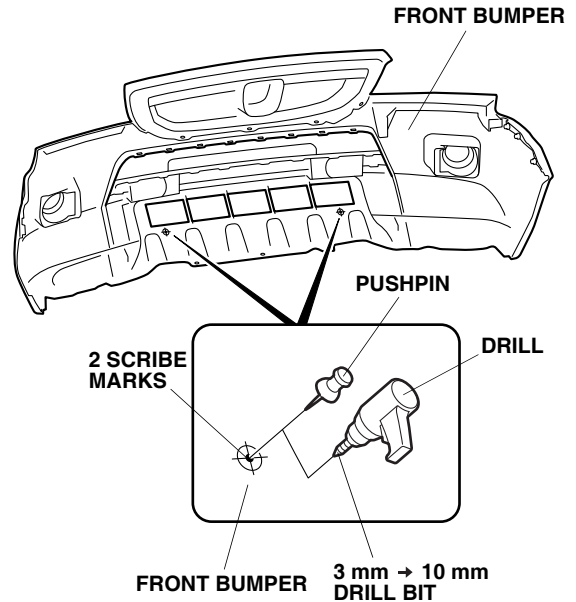


4. While wearing eye protection, first drill with a 3 mm drill bit and finish with a 10 mm drill bit, and remove all burrs.


- 5. Install the two rivnuts to the front bumper as shown.

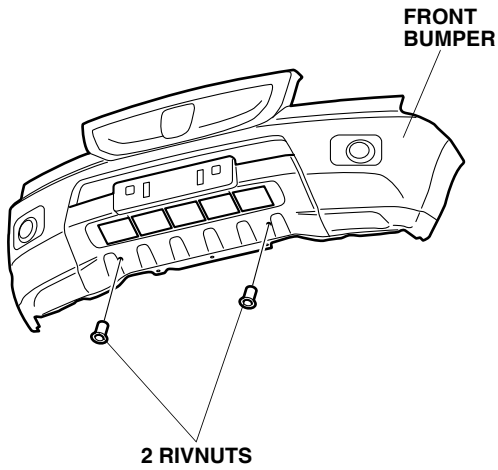


- Screw the rivnut onto the mandrel of the rivnut tool as shown.

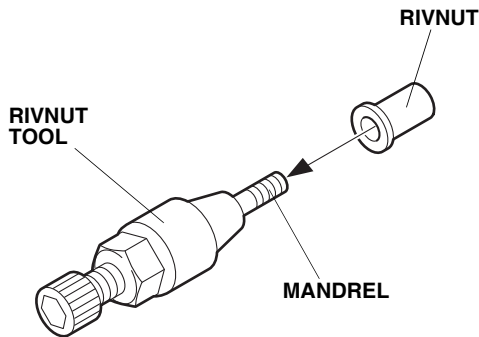


- Insert the rivnut into the hole in the front bumper and install the hex wrench on the rivnut tool.

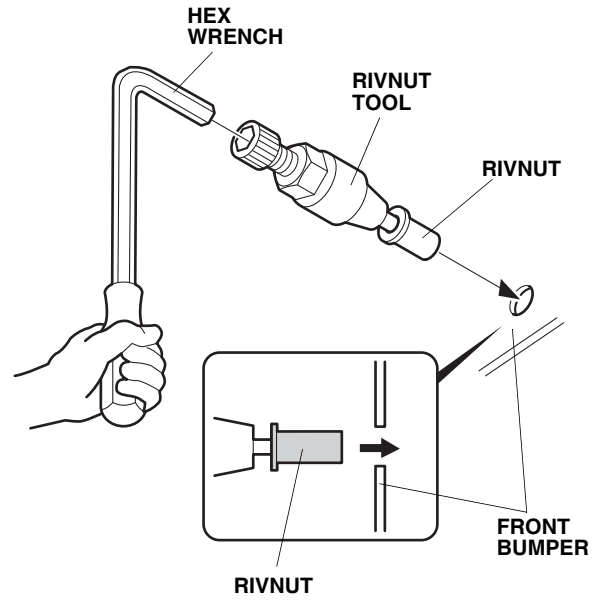


- Holding the rivnut tool with the hex wrench, turn the 19 mm wrench clockwise and install the rivnut on the front bumper.
- Remove the rivnut tool from the rivnut by turning the hex wrench counterclockwise.

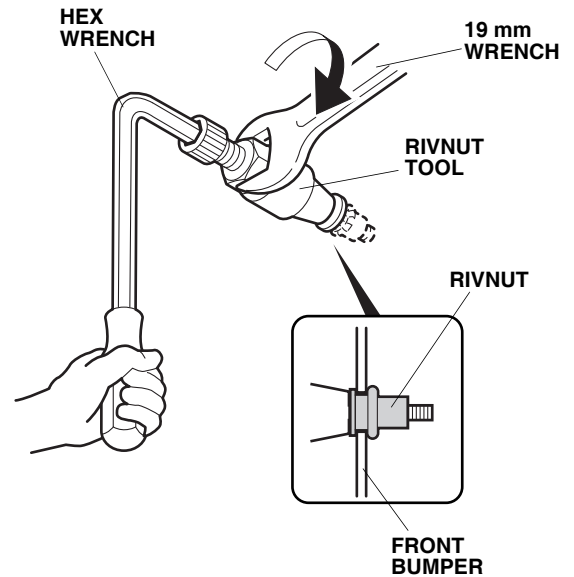

6. Position the front lower trim to the front bumper, and install the two washers, two spacers, and two special bolts as shown. Torque the special bolts to 4 N·m (3 lbf·ft).

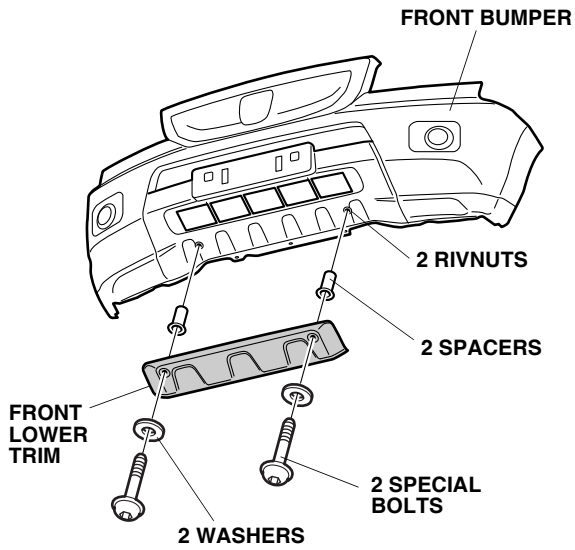

7. Reinstall the front bumper.

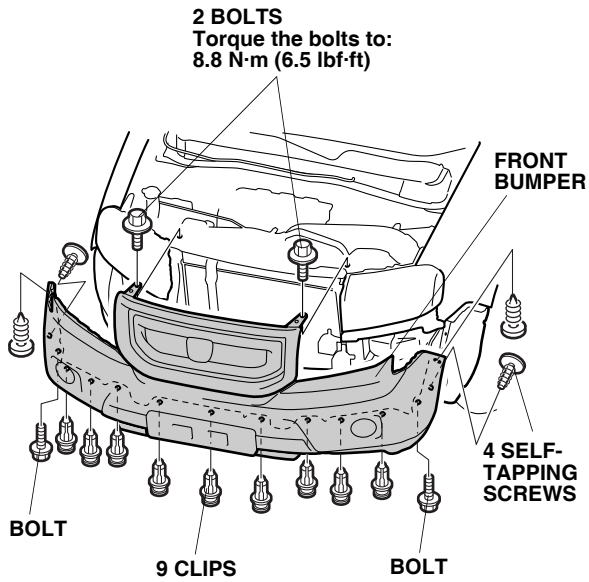

8. Reinstall all removed parts.