

HONDA INSTALLATION INSTRUCTIONS

Accessory
DOOR EDGE FILM
P/N 08P20-SWA-100A

Application
2010 CR-V


Publications No.
All 42387
Issue Date
AUG 2009

PARTS LIST

Left front upper door edge film




Left front lower door edge film

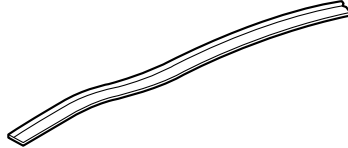

Right front upper door edge film



Right front lower door edge film

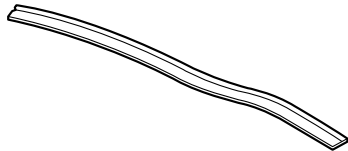

Left rear upper door edge film



Left rear lower door edge film




Right rear upper door edge film




Right rear lower door edge film




Applicator

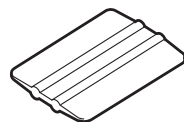

Soft sleeve

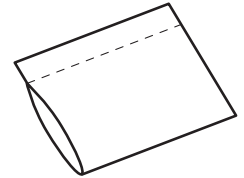

4 Alcohol swabs

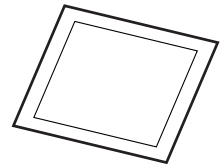


TOOLS AND SUPPLIES REQUIRED

Shop towel

Spray bottle

3M Protective tape application solution
P/N 08712-0008

Illustration of the Door Edge Film Installed on the Vehicle

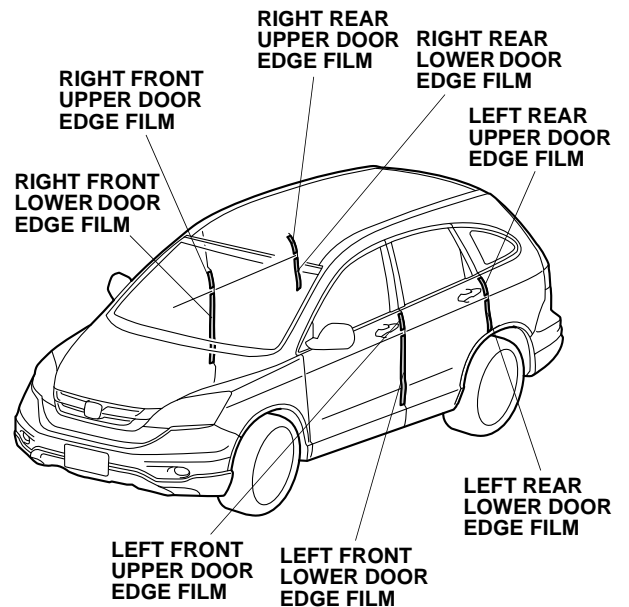

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:

- If you are also installing body side molding (sold separately), install it before you install the door edge film.
- Do not damage the body paint finish.
- This kit should be installed only if the ambient air temperature is above 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
- Identify each door edge film by referring to the identification mark.
- These instructions show the left door edge film being installed. The same procedure applies to installing the right door edge film.


Installing the Front Door Edge Film

1. Open the driver's door. Using one alcohol swab, thoroughly clean the areas where the left front door edge film will attach.

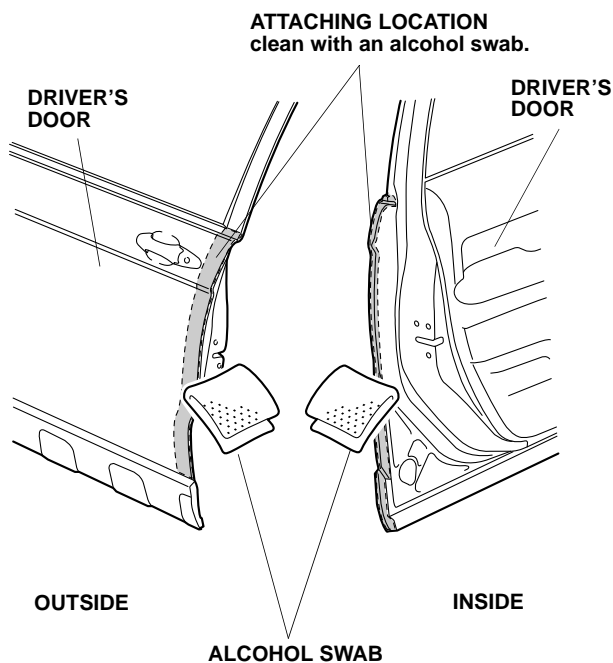


2. Close the driver's door. Using a spray bottle with 3M protective tape application solution, spray the area where the left front door edge film will attach.

NOTE: Do not spray the inside of the driver's door.

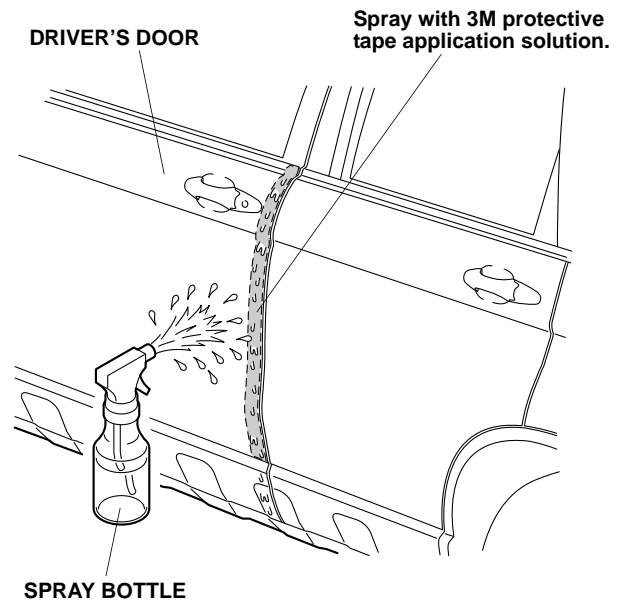


3. Open the driver's door. Peel back about 50 mm (2 in.) of adhesive backing from the left front upper door edge film. Align the V-notch with the end of the character line on the upper part of the driver's door.

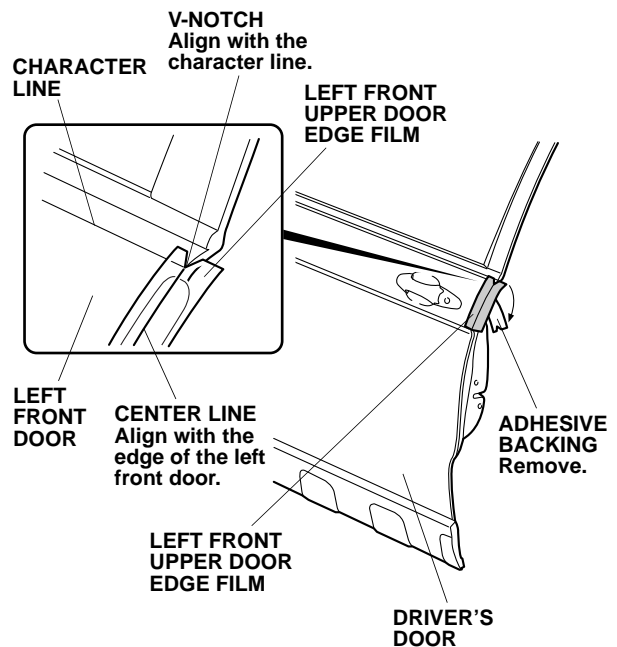


4. Align the center line on the left front upper door edge film with the edge of the left front door. While applying light pressure, carefully remove the adhesive backing and attach the left front upper door edge film to the driver's door.

- Peel back about 50 mm (2 in.) of adhesive backing from the left front lower door edge film. Align the V-notch with the end of the character line on the middle part of the driver's door as shown. If the vehicle is equipped with body side molding, cut the left front lower door film at the marks indicated on the film. Install the cut piece of film 5 mm below the body side molding.

WITHOUT BODY SIDE MOLDING

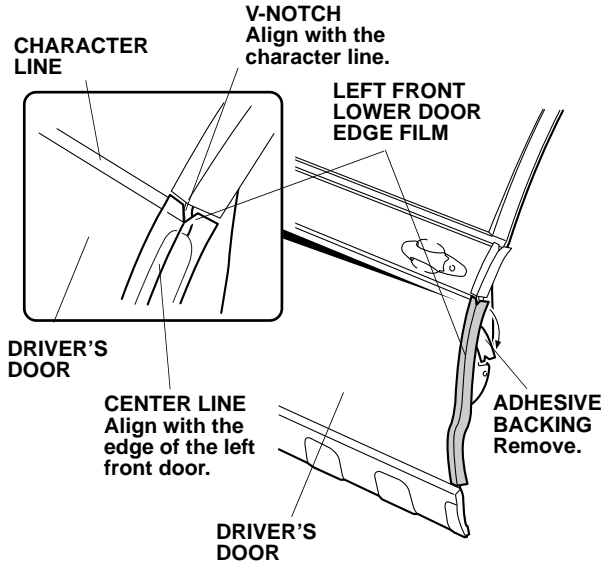


WITH BODY SIDE MOLDING

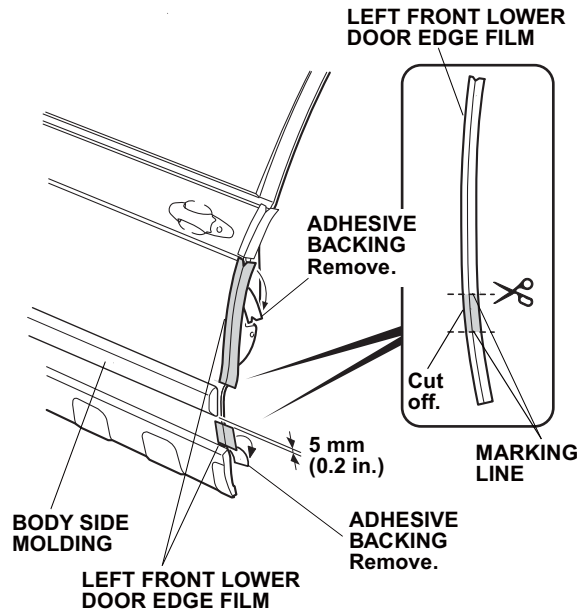


- Align the center line on the left front door edge film with the edge of the left front door. While applying light pressure, carefully remove the adhesive backing and attach the left front lower door edge film to the driver's door.


- Insert the applicator into the soft sleeve. Starting from the top and working downward, use the applicator with the soft sleeve to smooth the left front upper door edge film, and the left front lower door edge film. Move the applicator with the soft sleeve in one direction only.

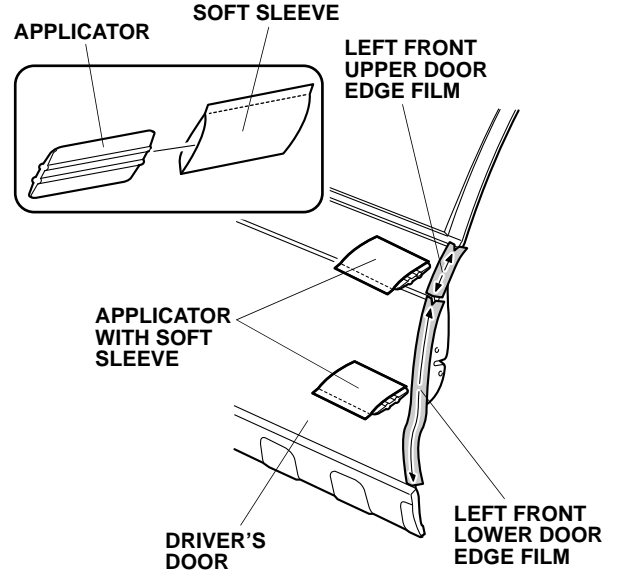


- Slowly remove the protective tape from the left front upper door edge film and left front lower door edge film.

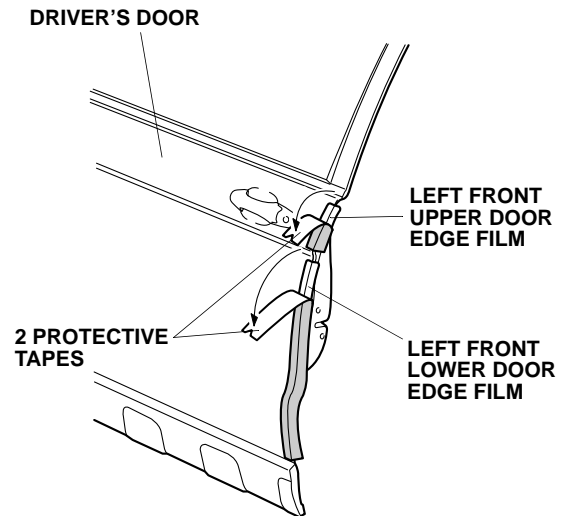

- Starting from the center and working outward, use the applicator with the soft sleeve to fold the left front upper door edge film and left front lower door edge film inside the driver's door as shown. Move in one direction only. Do not damage the door seal during this procedure.

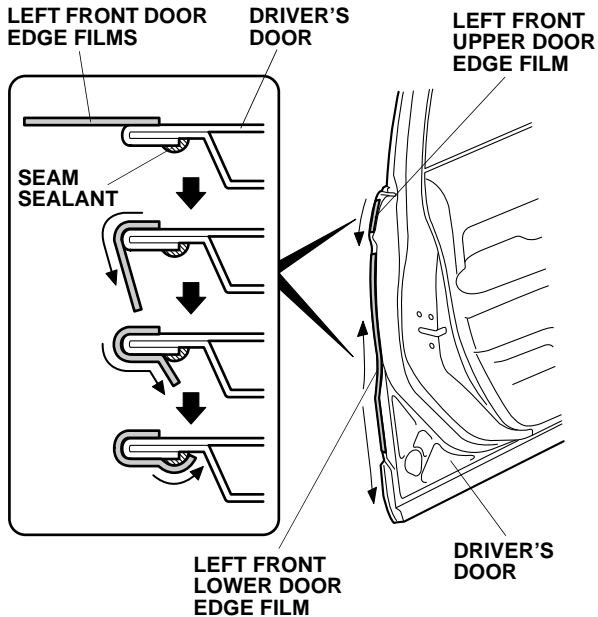


- Using a shop towel, wipe up the excess 3M protective tape application solution from the door edge film. Allow the left front door edge film to dry thoroughly.

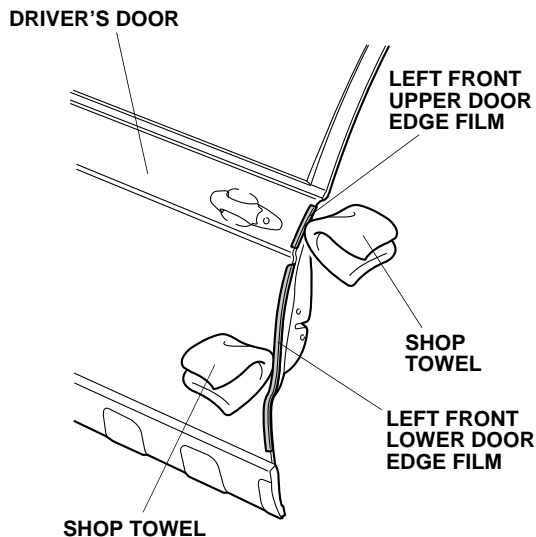


Installing the Rear Door Edge Film

- Open the left rear door. Using the alcohol swab, thoroughly clean the area where the left rear door edge film will attach. Close the left rear door.

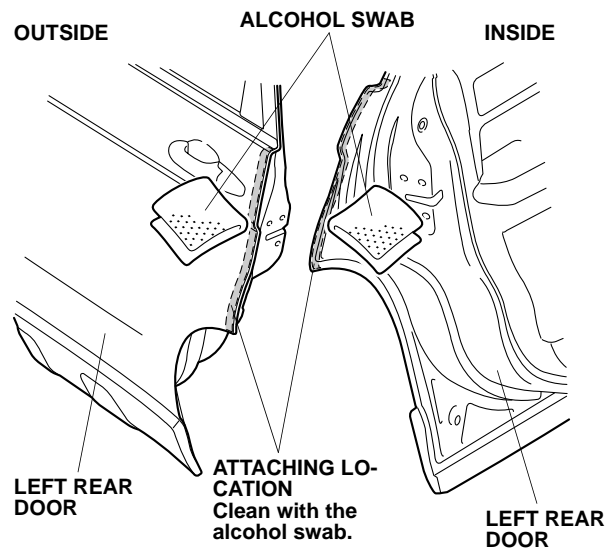


- Using a spray bottle with 3M protective tape application solution, spray the area where the left rear door edge films will attach.


NOTE: Do not spray the inside of the left rear door.

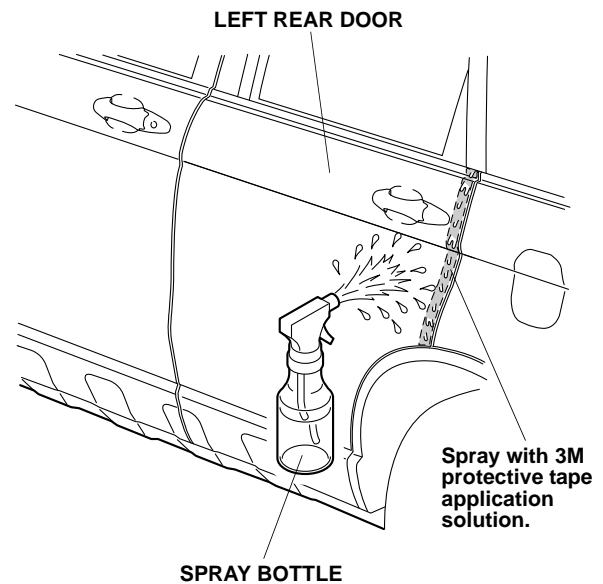

- Open the left rear door. Peel back about 50 mm (2 in.) of adhesive backing from the left rear upper door edge film. Align the V-notch with the end of the character line on the upper part of the left rear door as shown.

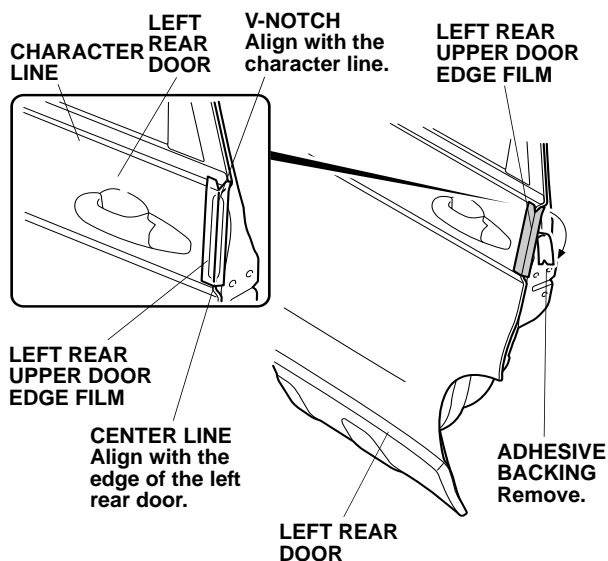


- Align the center line on the left rear upper door edge film with the edge of the left rear door. While applying light pressure, carefully remove the adhesive backing, and attach the left rear upper door edge film to the left rear door.
- Peel back about 50 mm (2 in.) of adhesive backing from the left rear lower door edge film. Align the V-notch with the end of the character line on the lower part of the left rear door as shown.

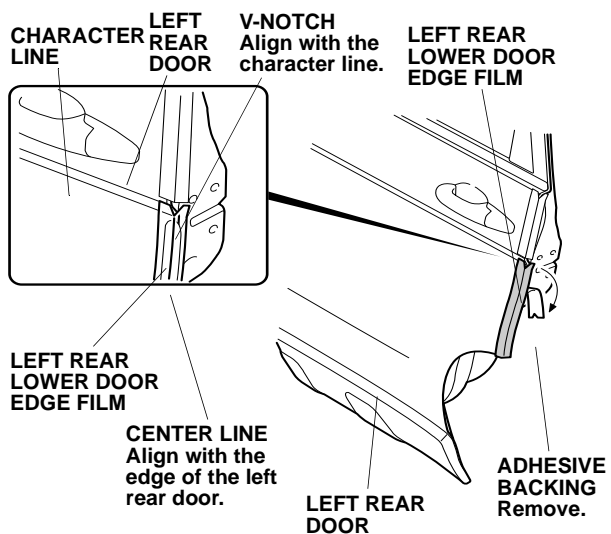


- Align the center line on the left rear lower door edge film with the edge of the left rear door. While applying light pressure, carefully remove the adhesive backing, and attach the left rear upper door edge film to the left rear door.


- Starting from the top and working downward, use the applicator with the soft sleeve to smooth the left rear upper door edge film, and left rear lower door edge film. Move the applicator with the soft sleeve in one direction only.

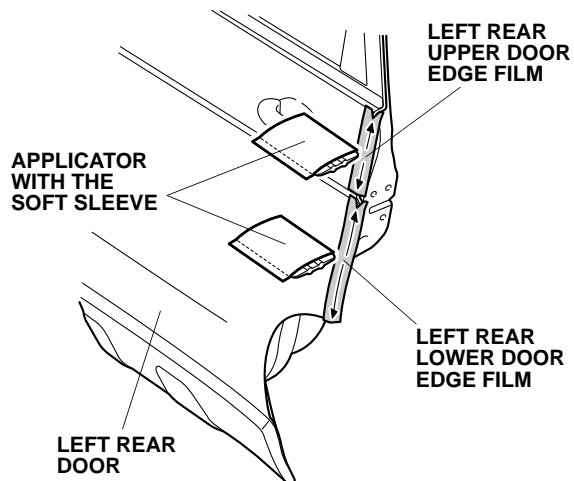


- Slowly remove the protective film from the left rear upper door edge film, and left rear lower door edge film.

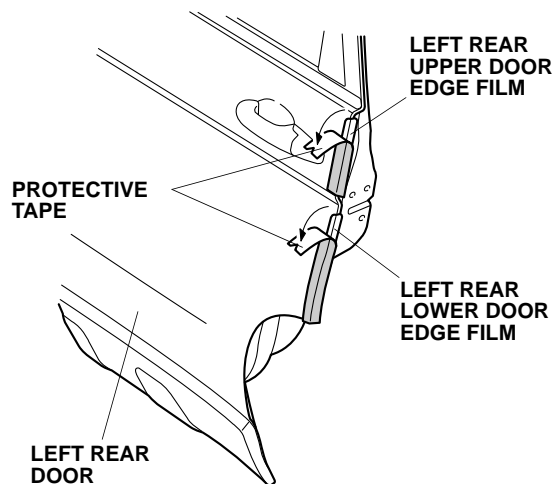

19. Starting from the center and working outward, use the applicator with the soft sleeve to fold the left rear upper door edge film and left rear lower door edge film inside the left rear door as shown. Move in one direction only. Do not damage the door seal during this procedure.

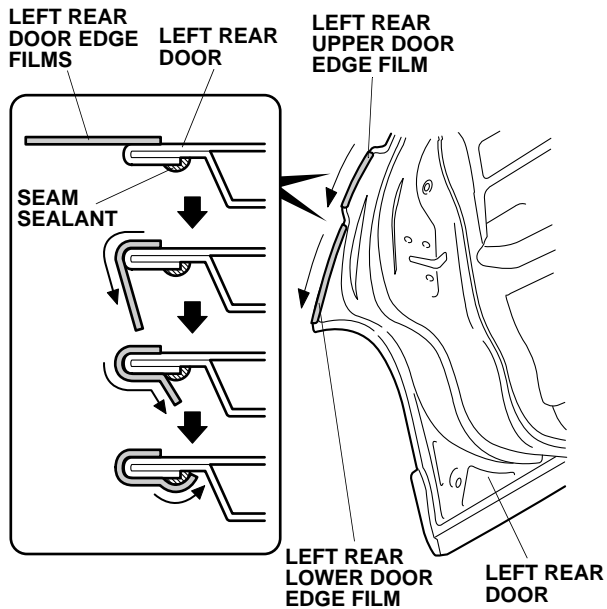

20. Using a shop towel, wipe up the excess 3M protective tape application solution from the door edge film. Allow the left rear door edge film to dry thoroughly.

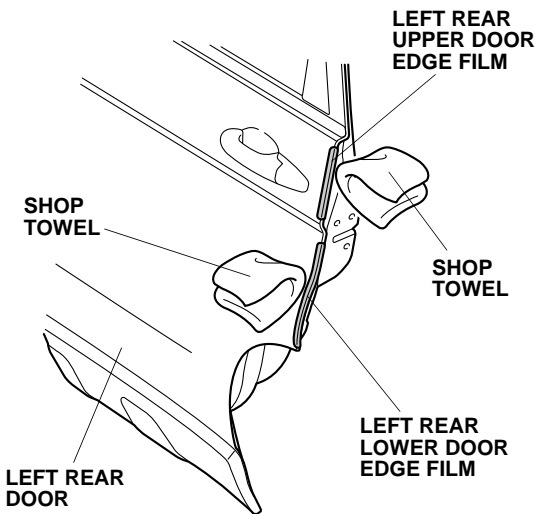

21. Repeat steps 1 through 20 to install the door edge film on the right side of the vehicle.