



INSTALLATION INSTRUCTIONS


Accessory
REAR SPLASH GUARD
P/N 08P09-SJC-100A

Application
2014 RIDGELINE


Publications No.
All 50351
Issue Date
AUG 2013

PARTS LIST

Left rear splash guard

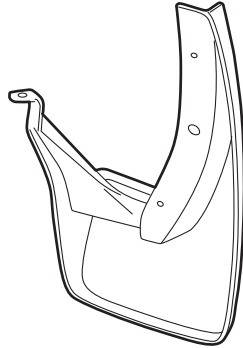

Right rear splash guard

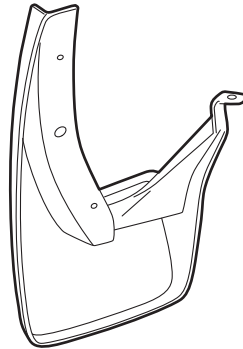

2 Clips



4 Self-tapping screws



TOOLS AND SUPPLIES REQUIRED

Stubby phillips screwdriver


Flat-tip screwdriver

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- Do not damage the paint finish.
 - Wash and wax the areas to be covered. Use a high quality paste wax.
1. Remove two self-tapping screws from the rear bumper on the left side.

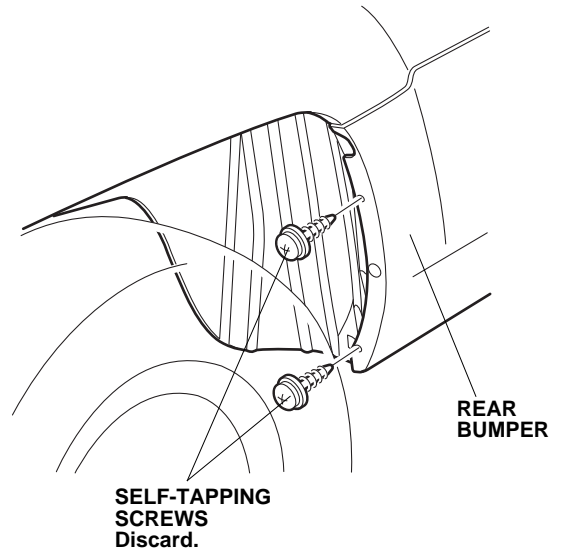


2. Remove one vehicle clip from the left rear inner fender.

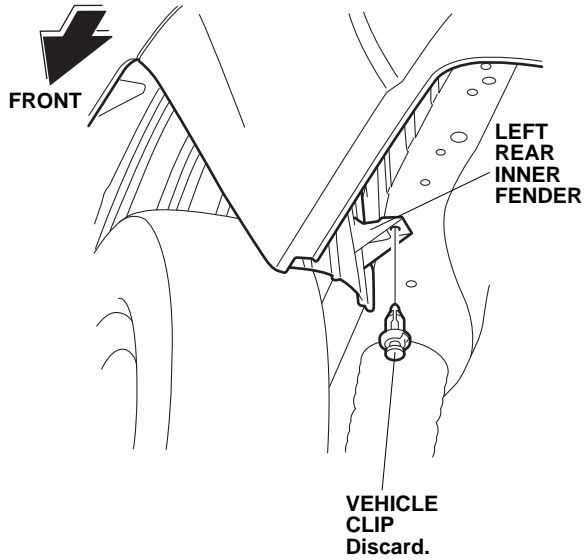

3. While holding the left rear splash guard against the vehicle, secure the splash guard with a new clip.

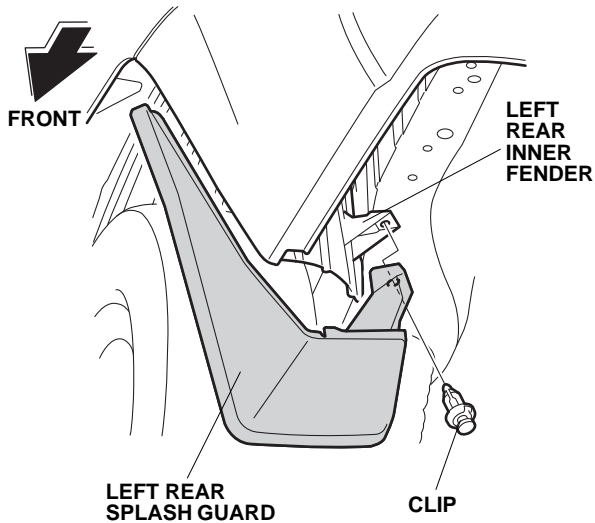

4. Install the left rear splash guard with two self-tapping screws in the order as shown. Make sure that there is no gap between the rear bumper and the splash guard before tightening the screws.

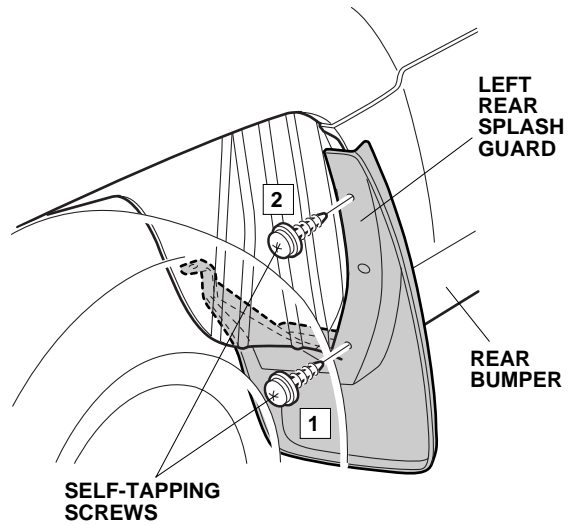

5. Repeat steps 1 through 4 on the right side of the vehicle.